

Tehnička dokumentacija



Naknadna ugradnja VISY-Density



lzdanje: 2016-03 Verzija: 2 Art.br.: 350232



Kazalo

1	Uvjeti	1
2	Deinstalirati VISY-Stick Advanced	1
3	Sastavite VISY-Density	2
4	Postavite VISY-Density	3
4.1	Ugradnja FAFNIR USB Adapter	3
4.2	Postavke za VISY-Density	5
5	Ponovo instalirajte VISY-Stick Advanced	8
6	Postavite novi alarm za "Razina proizvoda vrlo niska"	8
7	Privitak	8
7.1	Ažurirajte firmware VISY-Stick Advanced	8
7.2	Očitajte podatke o gustoći uz VISY-SoftView	9
7.3	Očitajte podatke o gustoći s VISY-Setupom	11
8	Popis prikaza	12

© Copyright:

Reprodukcija i prijevod dozvoljeni isključivo uz prethodnu pisanu suglasnost od strane FAFNIR GmbH FAFNIR GmbH zadržava pravo tehničkih izmjena proizvoda bez prethodne najave.



1 Uvjeti

Za naknadnu ugradnju VISY-Density potrebno je:

- VISY-Density (Part. Br. 908560)
- Granični prsten
- FAFNIR USB Adapter (Part. Br. 900040)
- Upravljački program za FAFNIR USB adapter
- Kalibracijski podaci za VISY-Density (dolazi s VISY-Density)
- Plastični potporni prsten (rezervni dio)
- Sigurnosni prsten (rezervni dio)
- Sigurnosni prsten kliješta
- Imbus ključ za M4 imbus vijak (2mm)
- Softver "Hyperterminal"
- Za VISY-Stick Advanced sa serijskim brojem nižim od 38200 potrebno je ažuriranje na verziju 4.05. Molimo pogledati upute u prilogu.
- Provjerite je li firmware ploče VI-4 4.06 ili viši. Za provjeru firmwarea ploče VI-4, pritisnite reset tipku (crvena tipka) na ploči VI-4 u VISY-Command. Prve tri znamenke koje se pojave na ekranu prikazuju broj trenutnog firmwarea (npr. 4-0-8). Ako je firmware ispod 4.06, molimo vas da nas kontaktirate za preuzimanje najnovije verzije.

2 Deinstalirati VISY-Stick Advanced

Pažljivo izvaditi VISY-Stick Advanced iz spremnika. Zapišite serijski broj i odgovarajući broj spremnika za svaki VISY-Stick Advanced kako biste bili sigurni da ćete vratiti pravi VISY-Stick Advanced u odgovarajući spremnik nakon ugradnje VISY-Density.



3 Sastavite VISY-Density



Odvojite sigurnosni prsten na kraju VISY-Stick Advanced koristeći hvataljku. Skinite sigurnosni prsten i plovak vode.

Klizeći gurnite i namjestite granični prsten i zatim VISY-Density na VISY-Stick Advanced.

Provjerite je li VISY-Density ugrađen na način da je laserski ispisana strana okrenuta prema gore/glavi senzora.

Ako je dostupan, zaglavi plutaju na sonde cijevi zz obilježavanje "top" krv u glavu senzora.

Vratite potporni i plastični potporni prsten i sigurnosni prsten.

Pritegnite oba M4 imbus vijka na VISY-Density ju koristeći imbus ključ (2mm).

Ovisno o visini na koju je VISY-Density pričvršćen, VISY-View ili VISY-SoftView će prikazati gustoću proizvoda kao gustoću na dnu spremnika (VISY-Density je postavljen na kraj VISY-Stick Advanced) ili kao gustoću (VISY-Density postavljen na visini od 200 mm).

Klizeći spustite plovak proizvoda na granični prsten. Uklonite tri sigurnosna uređaja za prijevoz na VISY-Density ju.

Prikaz 1: VISY-Stick Advanced uz VISY-Density



4 **Postavite VISY-Density**

4.1 Ugradnja FAFNIR USB Adapter

Spojite FAFNIR USB Adapter na USB-Port vašeg računala ili laptopa. Otvorit će se prozor koji će vas obavijestiti da je pronađen novi hardver.

Za FAFNIR USB Adapter morate instalirati upravljački program "FAFNIR USB Adapter" i "FAFNIR USB Serijski Adapter".



Prikaz 2: Koraci čarobnjaka za instalaciju hardvera

- Odaberite "No, not this time" (Ne, ne ovog puta)
- Kliknite na "Next>" (Dalje>)



Found New Hardware Wizard				
	This wizard helps you install software for: FAFNIR USB Adapter If your hardware came with an installation CD or floppy disk, insert it now.			
	What do you want the wizard to do?			
	 Install the software automatically (Recommended) Install from a list or specific location (Advanced) 			
	Click Next to continue.			
	<pre></pre>			

- Odaberite "Install from a list or specific location (Advanced)" (Instaliraj s popisa ili određene lokacije (Napredno))
- Kliknite na "Next >" (Dalje>)

Found New Hardware Wizard
Please choose your search and installation options.
 Search for the best driver in these locations. Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed. Search removable media (floppul CD-BOM) Include this location in the search: E:\
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.

- Odaberite "Search for the best driver in these locations" (Pronađi najbolji upravljački program na ovim lokacijama) i odaberite lokaciju upravljačkih programa
- Kliknite na " Next>" (Dalje>)





- Kliknite na "Continue Anyway" (Nastavi svejedno) te kliknite na "Finish" (Završi) kada instalacija FAFNIR USB Serijskog konvertera bude dovršena.
- Otvara se prozor koji vas pita želite li instalirati FAFNIR USB Adapter.
- Ponovite prethodne korake prije instalacije upravljačkog programa za FAFNIR USB Adapter.

4.2 Postavke za VISY-Density

Kako biste postavili VISY-Density, potreban vam je terminalski program Hyperterminal. Hyperterminal možete pronaći na računalu s operativnim sustavom Windows XP pod: "Start" \rightarrow "Programs" \rightarrow "Accessories" \rightarrow "Communications" \rightarrow "HyperTerminal" ("Start" \rightarrow "Programi" \rightarrow "Dodaci" \rightarrow "Komunikacija" \rightarrow "HyperTerminal").

Ako koristite drugu verziju Windows operativnog sustava, potražite online odgovarajuću verziju Hyperterminala.

S VISY-Density dobili ste kalibracijske parametre. Prije nego nastavite, molimo vas da provjerite koji je VISY-Density modul postavljen na koji VISY-Stick Advanced.

Spojite FAFNIR USB Adapter na VISY-Stick Advanced.

Provjerite pod "Control Panel" \rightarrow "System" \rightarrow Tab "Hardware" \rightarrow "Devices" ("Upravljačka ploća" \rightarrow "Sustav" \rightarrow Tab "Hardver" \rightarrow "Uređaji") za COMPort "FAFNIR USB Adaptera".

Otvorite Hyperterminal i odaberite COMPort FAFNIR USB Adaptera. Unesite odgovarajuće ime (npr: Gustoća (Density)) pod "Opis veze" i kliknite na "OK". Unesite postavke komunikacije za COMPort 1200 bps i kliknite na "OK". Kliknite na gumb (oblik telefona) prikazan na slici niže, kako biste prekinuli vezu.



🗞 tset - HyperTerminal				
<u>File E</u> dit <u>View Call T</u> ransfer <u>H</u> elp				
D 🚅 😰 🌋 🗅 🎦 😭				

- Kliknite na gumb "Disconnect" (Prekini vezu)
- Ovorite "File" → "Properties" ("Datoteka" → "Svojstva") i odaberite "Settings"

🗞 tset - HyperTerminal	
Eile Edit View Call Iransfer Help	
Eigenschaften von tset ? Connect Tc Settings Function, arrow, and ctrl keys act as • • Terminal keys • Backspace key sends • @ • Qtrl+H Del • • Qtrl+H Del • Ctrl+H, Space, Ctrl+H Emulation:	ASCII Setup ASCII Sending Send line ends with line feeds Send line ends with line feeds Echo typed characters locally Line delay: 0 milliseconds. Character delay: 0 milliseconds. ASCII Receiving Append line feeds to incoming line ends Force incoming data to 7-bit ASCII Wrap lines that exceed terminal width OK Cancel

- Kliknite na "ASCII Setup" (ASCII postavke)
- Odaberite "Pošalji kraj reda s prijelomima redaka" i "Lokalno prikaži unesene znakove".
- Potvrditi oba prozora s "OK"
- Kliknite na gumb u obliku telefona "Connection" kako biste se ponovno spojili.



Unesite "S_{uuu}0" (unesite četiri razmaka između S i O) te pritisnite
 <Potvrdi>. VISY-Stick Advanced će poslati serijski broj priključenog VISY-Stick Advanced (u = razmak).

Primjer:



Dva su koraka potrebna za dovršetak postavki VISY-Density ja.

- (1) Unesite u Hyperterminal: RXP[Serijski br. VISY-Stick Advanced]DS
- (2) Unesite u DS Command (nalazi se u tablici koja dolazi uz VISY-Density) ugrađenog VISY-Density modula sa stražnje strane prvog dijela (vidi primjer ispod)

Pritisnite <Potvrdi> i sonda će odgovoriti sa (i.O.) Ako sonda ne odgovara, molimo provjerite jeste li izveli ispravno svaki korak.

Na primjer:

COM3_1200 - HyperTerminal			
He Edit View Call Iransfer Help			
RXP30144DS1 1 112 26 i.0. Ručno unesite da	5945 19228 0 39133 I opiranje iz atoteke		
	Density Module #	DS Command	
	112	1 1 112 26945 19228 0 39133	
	117	1 1 117 25619 18174 0 62822	
	118	1 1 118 26381 18730 0 36352	
	119	1 1 119 26483 18843 0 30072	
	124	1 1 124 27736 19387 0 3212	
	125	1 1 125 26456 18288 0 41533	
	128	1 1 126 26609 18499 0 21907	
	127	1 1 127 25429 17518 0 5107	





5 Ponovo instalirajte VISY-Stick Advanced

Prije instalacije, izvucite 3 zatvarača iz VISY-Densityja. Vratite VISY-Stick Advanced u spremnik. Provjerite je li svaki VISY-Stick Advanced u pravom spremniku.

6 Postavite novi alarm za "Razina proizvoda vrlo niska"

Očitajte položaj plovka proizvoda s VISY-Setupom ("Trenutne vrijednosti" \rightarrow "Razina proizvoda u mm" i "Stvarna vrijednost punjenja"). Zabilježite podatke o položaju plovka i namjestite alarm za "Razina proizvoda vrlo niska" na položaj viši od trenutnog.



7 Privitak

7.1 Ažurirajte firmware VISY-Stick Advanced

Molimo kontaktirajte info@fafnir.de prije ažuriranja sondi. Poslat ćemo vam trenutni firmware i potrebni softver.

Provjerite pod "Control Panel" \rightarrow "System" \rightarrow Tab "Hardware" \rightarrow "Devices" ("Upravljačka ploča" \rightarrow "Sustav" \rightarrow Tab "Hardver" \rightarrow "Uređaji") za COMPort "FAFNIR USB Adapter".

Otvorite program HexLoad. Kliknite na "Opcije" \rightarrow "Projekt..." i odaberite "Baudrate 57600" te COMPort FAFNIR USB Adapter. Kliknite na "Datoteka" \rightarrow "Otvori" i odaberite trenutni VISY-Stick Advanced firmware koji ste dobili od nas. Spojite FAFNIR USB Adapter s VISY-Stick Advanced. Odaberite "Target" \rightarrow "Auto" i HexLoad će započeti ažuriranje firmwarea.



Ako Hexload ne prikazuje ništa pod "Target", odspojite i ponovno spojite konektor M12.



7.2 Očitajte podatke o gustoći uz VISY-SoftView

VISY-SoftView je softver koji se pokreće na našem VISY-View Touchu ili na VISY-Command GUI. VISY-SoftView prikazuje podatke o gustoći zajedno s ostalim informacijama o spremniku. VISY-SoftView prikazuje gustoću proizvoda ili gustoću na dnu spremnika ovisno o položaju na VISY-Stick Advancedu na koji je ugrađen VISY-Density.

Kako biste pregledali gustoću uz VISY-SoftView, funkciju valja aktivirati. Za aktiviranje idite na "Funkcije sustava" → "Podešavanje". Unesite lozinku "22765". Odaberite tipku "Opc. sustava" i zatim "Gustoća (Density)".

Pritisnite tipku "vrijednosti gustoće vidljive" i pohranite. VISY-SoftView će vam potom dojaviti: "Trenutno: Vrijednosti gustoće su vidljive" (vidi niže).



Prikaz 3: Podešavanje vidljivosti gustoće



Kako biste prikazali gustoću pojedinog spremnika, kliknite na željeni spremnik i otvorit će se sljedeći prozor:

2010-06-08 09:30:58 System			Status: OK		FAFNIR	
Tank Details						
<u>1: Benzin</u>	1: Benzin Tank Config values:			ALARMS		
	Nominal vol	Nominal volume:				
	Capacity:		9700 L			
	Savety volu	ime:	300 L			
	Product:		Benzin			
	Comp. Ten	Comp. Temperature:				
Measurement values:	Measurement values:					
Volume: 7	7571.1 Litres					
Volume TC: 7	7600.7 Litres		Ľ			
Ullage: 2128.9 Litres			Age of Data: 00:00:39			
Temperature:	11.8 °C	RF	Field streng	ith: Labe Labe La	be <mark>Labe</mark>	
Water level:	0.0 mm		RE Batte	ry: Labe Labe La	he Labe	
Density:	- g/L		Ducco			
Density TC:	- g/L	_				
Sump density:	876.5 a/l		1		Close	
Sump density TC:	873.1 g/L		▼ <u> </u>		Ciose	

Prikaz 4: Podaci o spremniku



7.3 Očitajte podatke o gustoći s VISY-Setupom.

Otvorite VISY-Setup i spojite se uz VISY-Command koristeći odgovarajući COMPort. Idite na "Trenutne vrijednosti" i idite prema dolje. Pronaći ćete "Gustoća (Density) proizvoda" i "Gustoća (Density) na dnu". Ovisno o položaju VISY-Densityja, prikazat će se podaci na jednome od dvaju polja.

VISY-Setup		
	Current Values	
Current <u>V</u> alues (F1)	Probe Terminal No. : 1 🛉	
دی Control <u>U</u> nit (F2)	VISY-Stick	
🛱 Date and Ti <u>m</u> e (F3)	Probe Status Statuscode :	
Probes (F4)	93 Probe not configured Battery : RF Field Strength :	
IIII I ank tables (F5)	Product Density Position : 0 mm	•
Input (F6)	Density: 0,0 g/L	
	Temperature at Density Meter : 0,0 °C	
Output (F7)	Density Alarm : No Alarm	
Output-Events (F8)	Position : 0 mm	
Save and Load (F9)	Density : 0,0 g/L	•
About VISY-Setup	Accept Discard Close	

Prikaz 5: Vrijednosti VISY-Density



8 Popis prikaza

Prikaz 1: VISY-Stick Advanced uz VISY-Density	2
Prikaz 2: Koraci čarobnjaka za instalaciju hardvera	3
Prikaz 3: Podešavanje vidljivosti gustoće	9
Prikaz 4: Podaci o spremniku	10
Prikaz 5: Vrijednosti VISY-Density	11





FAFNIR GmbH Bahrenfelder Str. 19 22765 Hamburg, Njemačka Tel.: +49/40/39 82 07–0 Fax: +49/40/390 63 39 E-Mail: info@fafnir.com Web: www.fafnir.com