



VISY-X System for Shell Petrol Stations

HSSE

Installation guide

**Art. No.: 350016
Release: 11/2015**

1 Introduction

- 1.1 General Description
- 1.2 Workflow
- 1.3 Safety Requirements
 - Preconditions
 - Tools
 - Rules & Regulations
 - Site preparation

2 Tank Monitoring

- 2.1 Level Gauging (VISY-Stick)
 - Flange reducer (optional)
 - Probe Unpacking
 - Screw-in unit sealing
 - Position Offset
 - Fixing
- 2.2 Sump Control (VISY-Stick Sump Manhole)
- 2.3 Probe Wiring (Junction Box)

3 Dispenser Monitoring

- 3.1 Sump Control (VISY-Stick Sump Dispenser)

4 Pipe Monitoring

- 4.1 Leak Detection of Tank Pipes (VIMS Tank)
- 4.2 Leak Detection of Dispenser Pipes (VIMS Dispenser)

5 Controller Units

- 5.1 Mounting
- 5.2 VISY-Command Connections
- 5.3 VISY-Input 8 Connections
- 5.4 VISY-Output 8 Connections

6 PC Connection

7 Annex

- 7.1 FAFNIR ATG Details
- 7.2 VISY-X System: Wired version
- 7.3 VISY-X System: RF version

Imprint




1.1 General Description

The VISY-X System is designed for petrol station monitoring.

It consists of probes for level gauging and environmental pollution control.



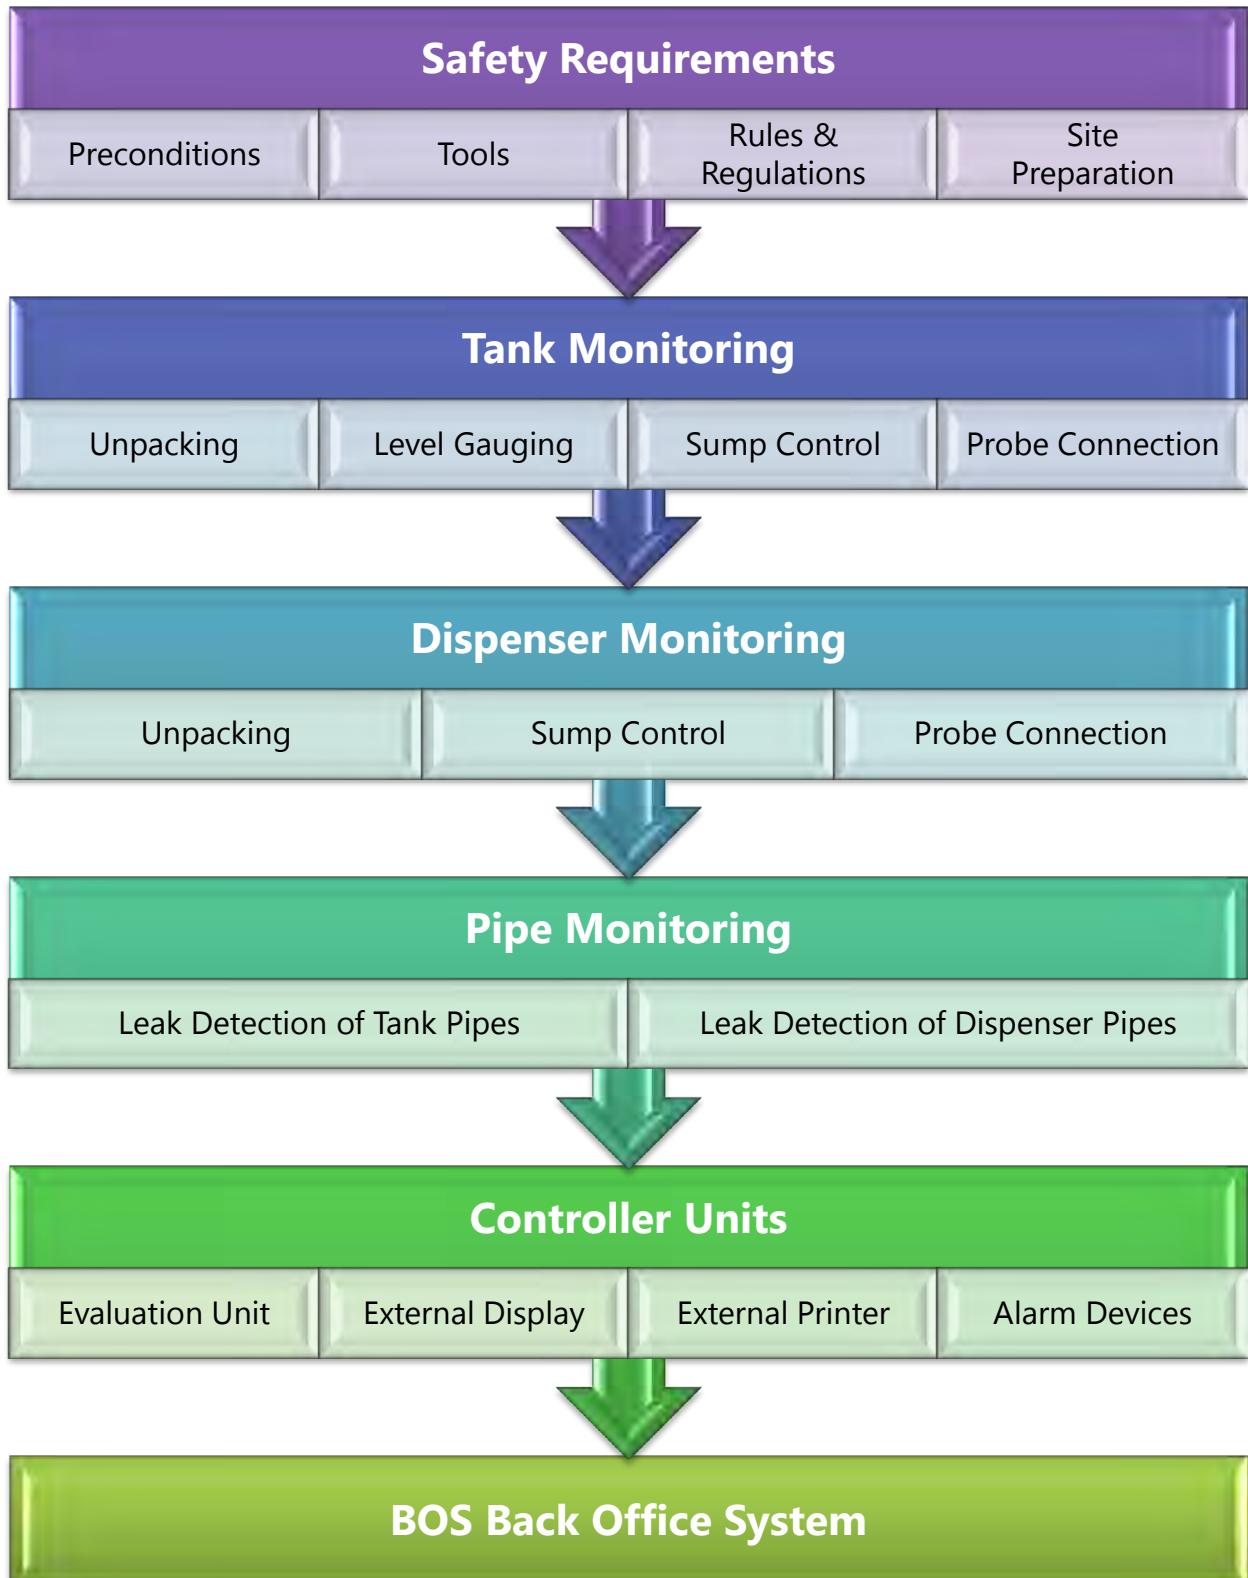

Preconditions



Product training
Regularly



Safety helmet



Safety vest



Safety shoes (S3)
Anti-static, oil/petrol-resistant



Gloves
Cut-resistant





EX-approved tools



Check tools for malfunctions

Rules and Regulations



Register with the operator



Observe installation instructions




Observe local safety and accident prevention regulations



Entry in the Safety Book



Fire, ignition sources, smoking prohibited

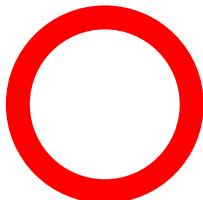


Security zones (red, green, emergency)



Check delivery



Protect installation site

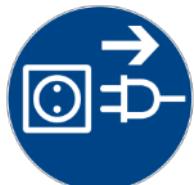

Disconnect power supply and secure against reactivation



2 persons at manhole of depth > 1.25m



Drain and degas manhole



Establish potential equalization



Check wiring and cable connections



Product training Regularly





Safety helmet



Safety vest/clothes



Safety shoes (S3)

Anti-static,

oil/petrol-resistant



Gloves

Cut-resistant



Register with the operator





Observe installation instructions




Observe local safety and accident prevention regulations




Entry in the Safety Book



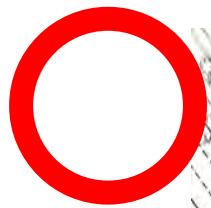

Security Zones

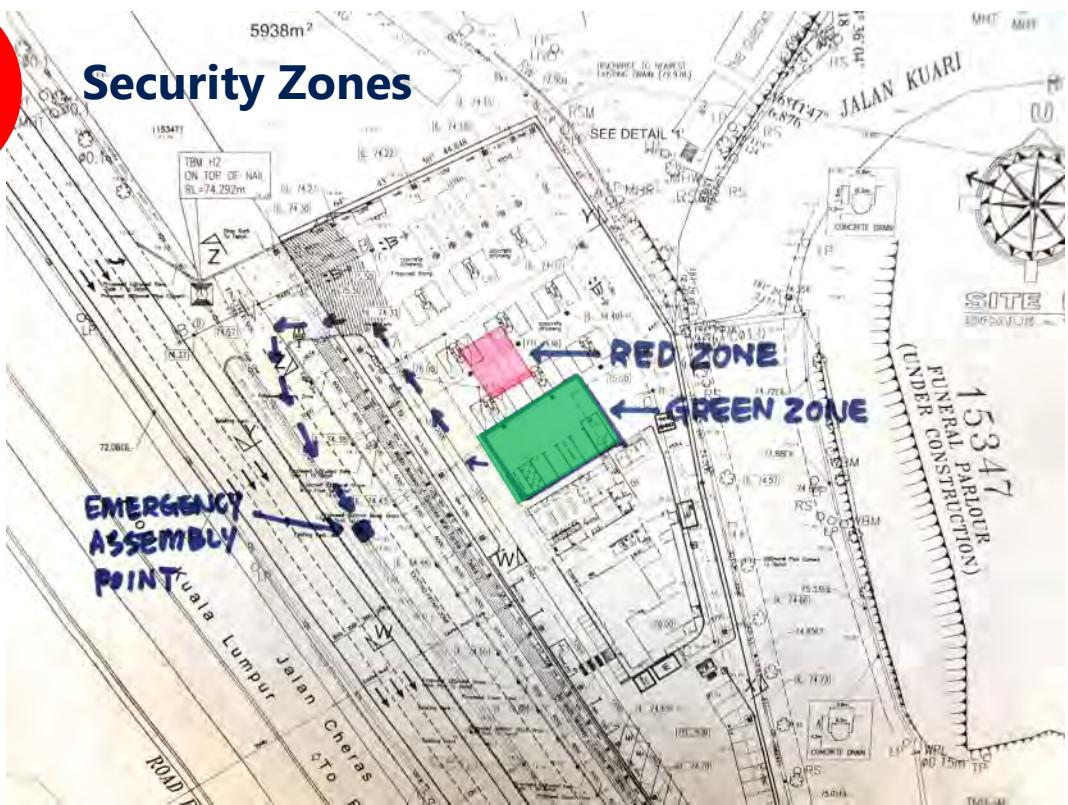



EX-approved tools





Check delivery



Controller



Environmental sensors



Probes





**Fire, ignition
sources, smoking
prohibited**




Protect installation site






Protect installation site



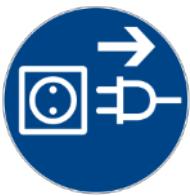

**Disconnect power supply
and secure against reactivation**

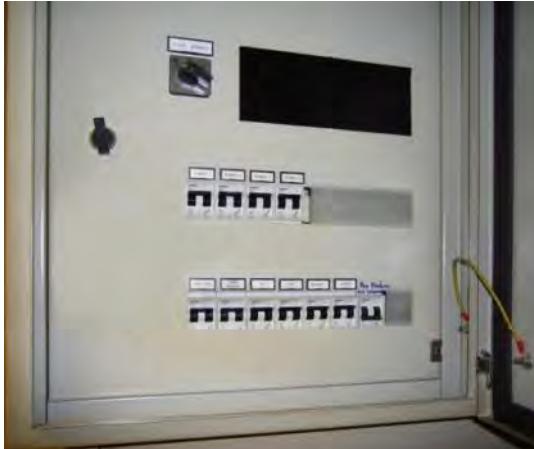

2 persons at manhole of depth > 1.25m






Drain and degas manhole






Drain and degas manhole

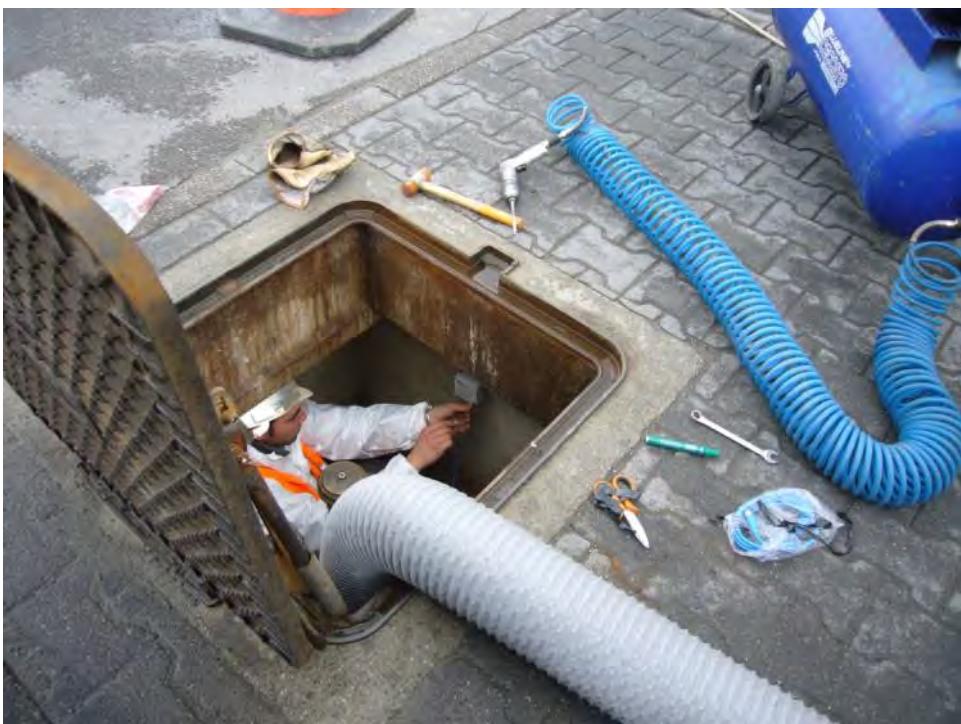




Establish potential equalization (PE)

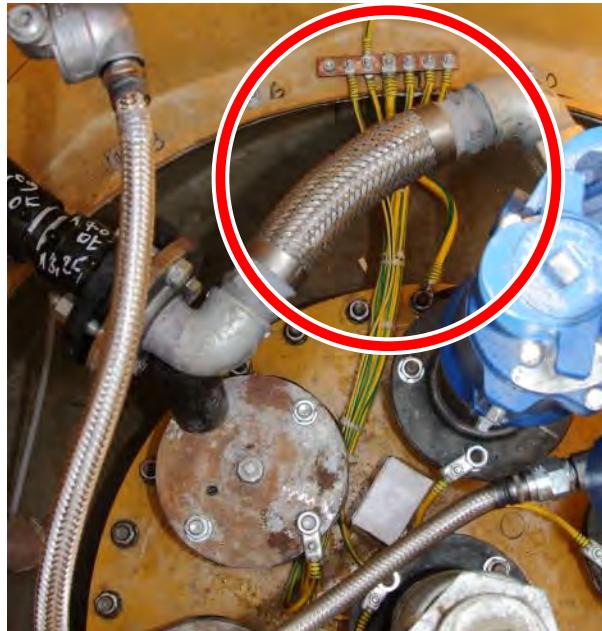

Check wiring and cable connections



Connections to VISY-Command

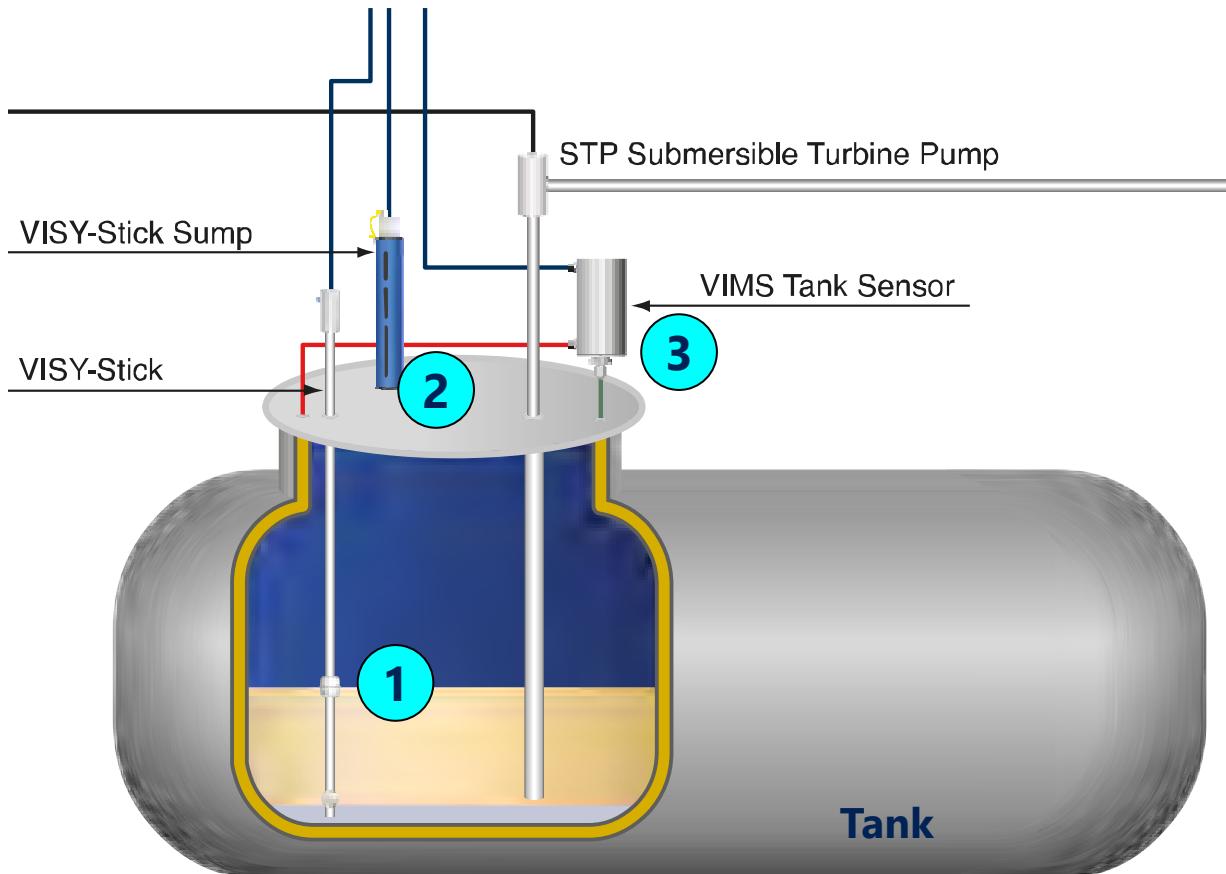


- 1 Level gauging with "VISY-Stick"
- 2 Manhole monitoring with "VISY-Stick Sump Manhole"
- 3 Leak detection with "VIMS Tank"



2.1 Level Gauging (VISY-Stick)

Sample installation with VISY-Stick "screw-in" version !

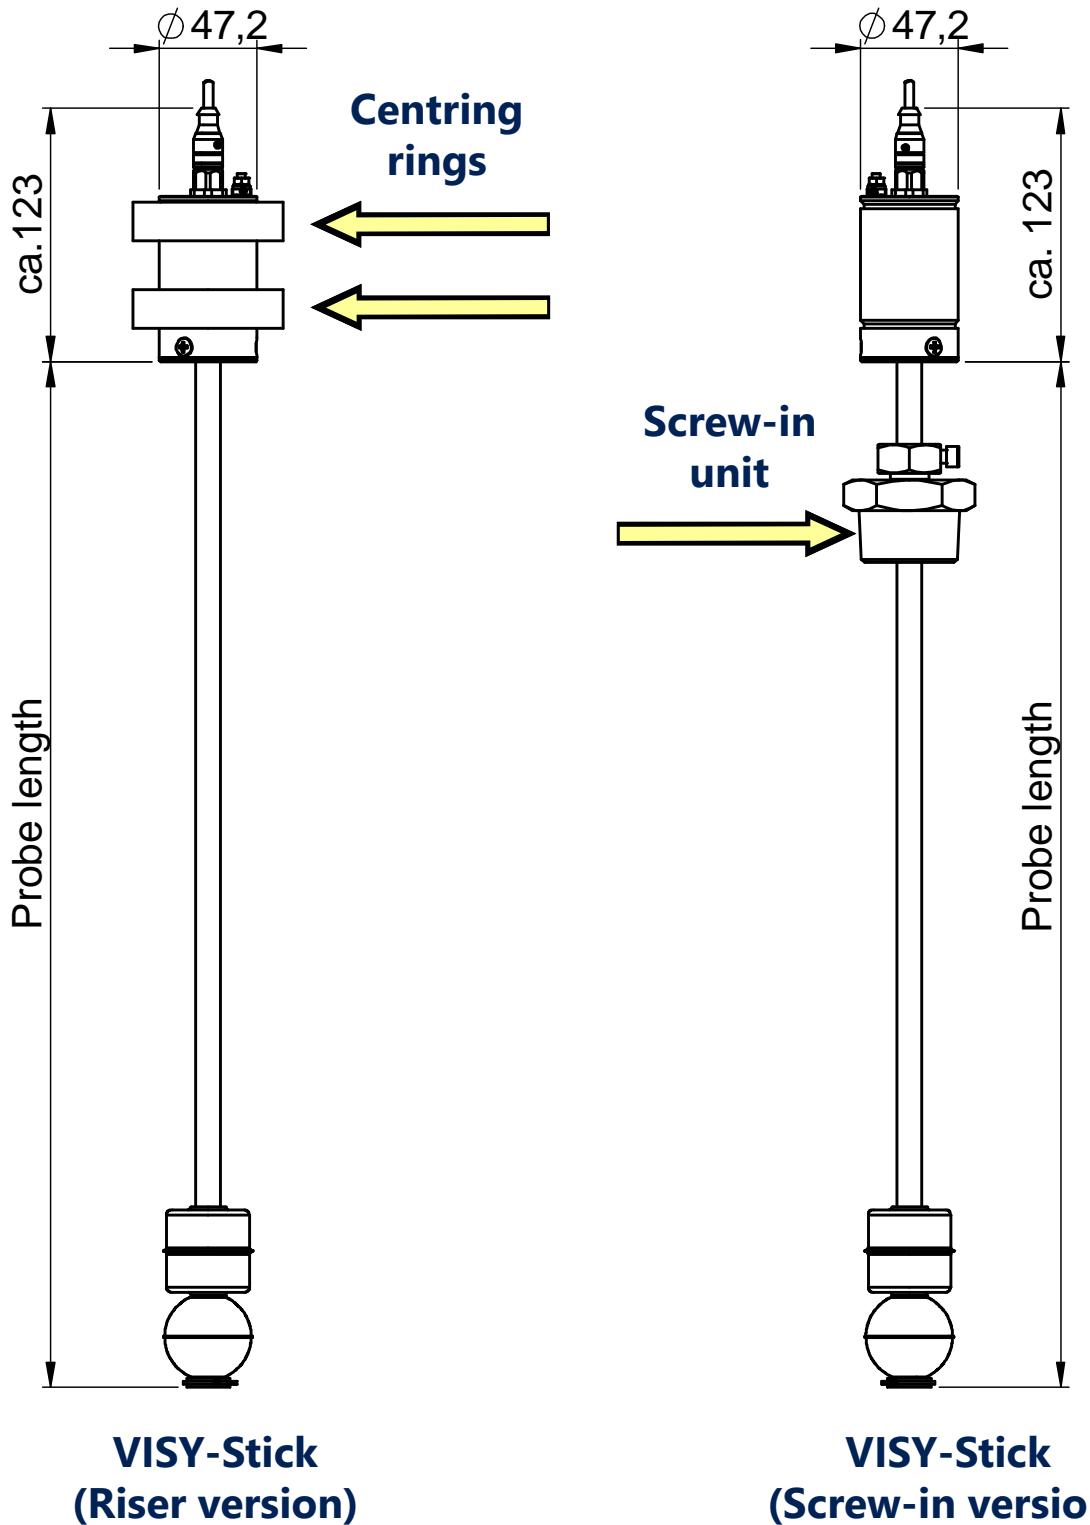

Flange Reducer (optional)



Unscrew ...



and remove flange.



Unscrew ...



and remove blind plug.



Flange Reducer (optional)

FAFNIR™


Seal the reducer thread



Reducer 2" x 1½"
(optional)



Screw the reducer into
the flange

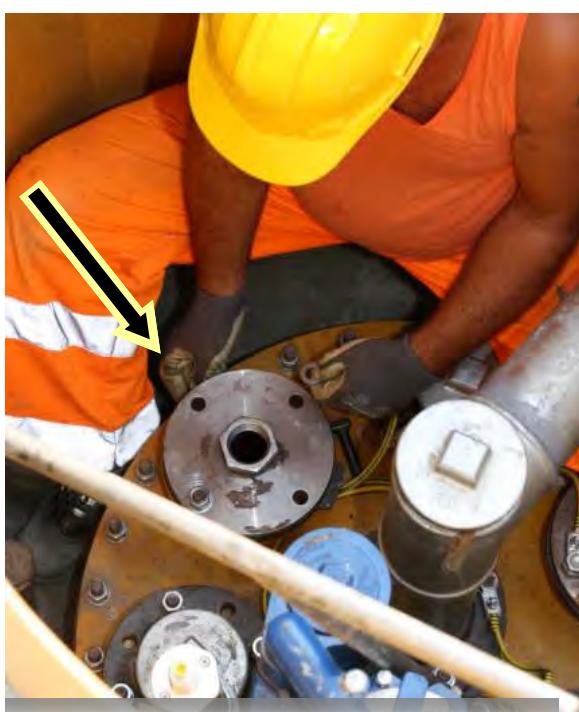

Relocate the flange ...



... and lock it.



Flange Reducer (optional)

FAFNIR™




Connect PE cable (green/yellow)





Pull out the probe



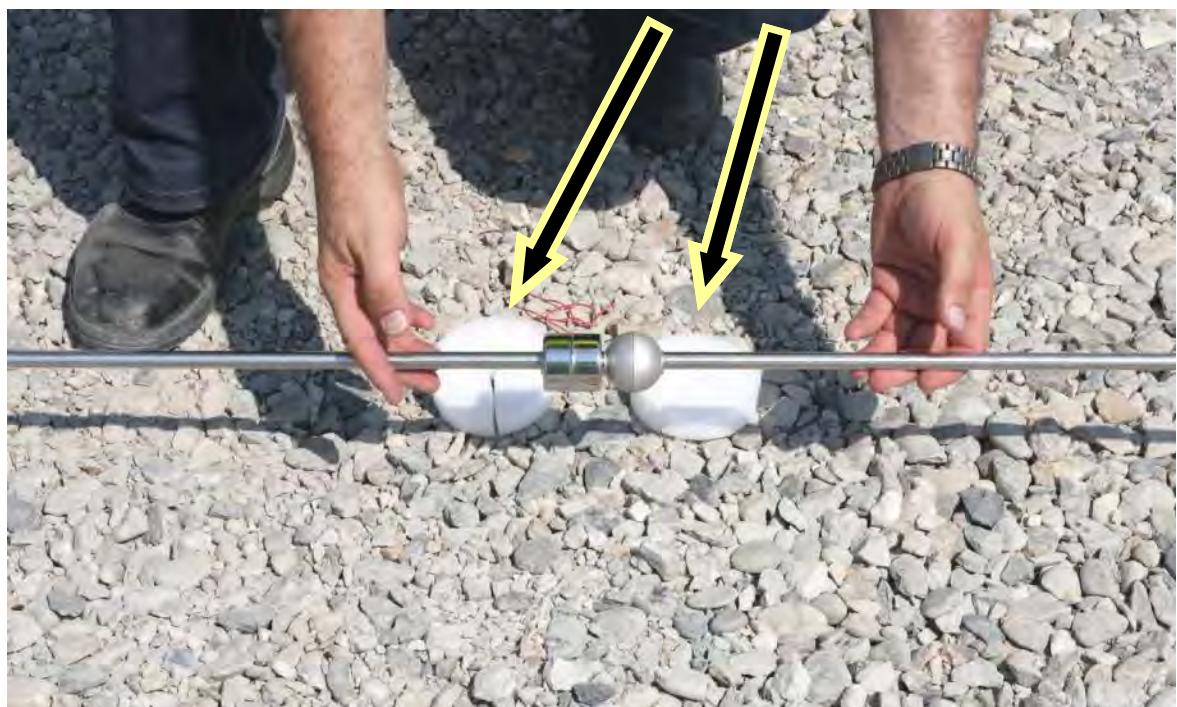

Probe Unpacking






**Attention: The probes
must not be bended!**



**Attention: The probes
must not be bended!**

Probe

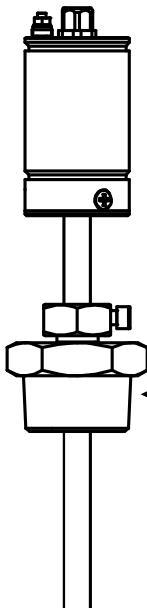

Roughen



Sealing strip



Sealing compound





Transport ...



... to the manhole.



Fill in the FAFNIR ATG Details
(see annex)




Tank details

Probe details

FAFNIR ATG Details

Terminal No. (VP-Board)	Tank No. / Dispenser No.	Tank Volume [l]	Tank Diameter [mm]	Type of Product	Offset (see Diagram)	VISY-Stick Ser. No.	VISY-Stick Sump Manhole Ser. No.	VISY-Stick Sump Dispenser Ser. No.	...
1	1	50000	2500	Diesel	10	28813	/	/	
2	2	25000	1600	V-Power Diesel	10	28814	/	/	
3	3	40000	2000	V-Power	10	28815	/	/	
4	4	50000	2500	Super	10	28812	/	/	
5	5	50000	2500	Diesel	10	28816	/	/	
6	6	50000	2500	Super	10	28811	/	/	
7	1/2	/	/	/	/	/	/	28472	
8	3/4	/	/	/	/	/	/	28471	
...									

Form attached to Annex

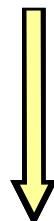



Installation Offset
see next page!



Offset = Vertical Distance (b) + Safety Distance

The "Vertical Distance (b)" can be read out from the drawing below. The "Safety Distance" is the mounting distance to the tank bottom and should be 10 mm.

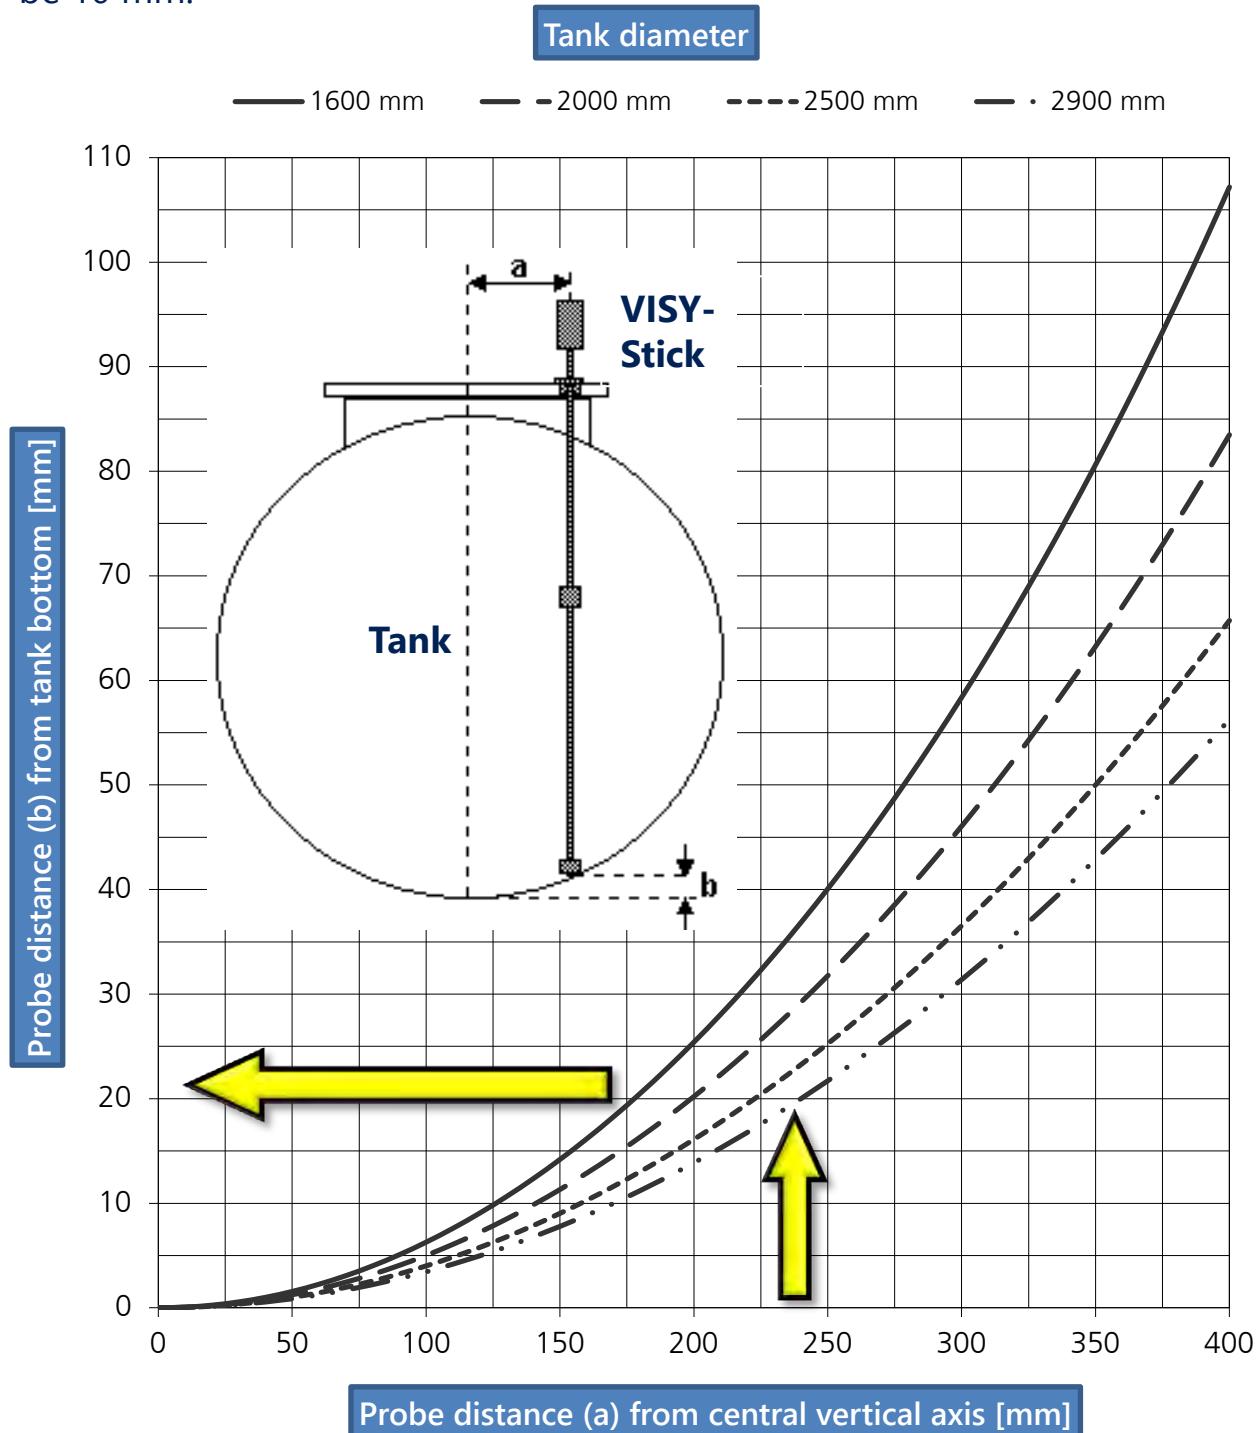


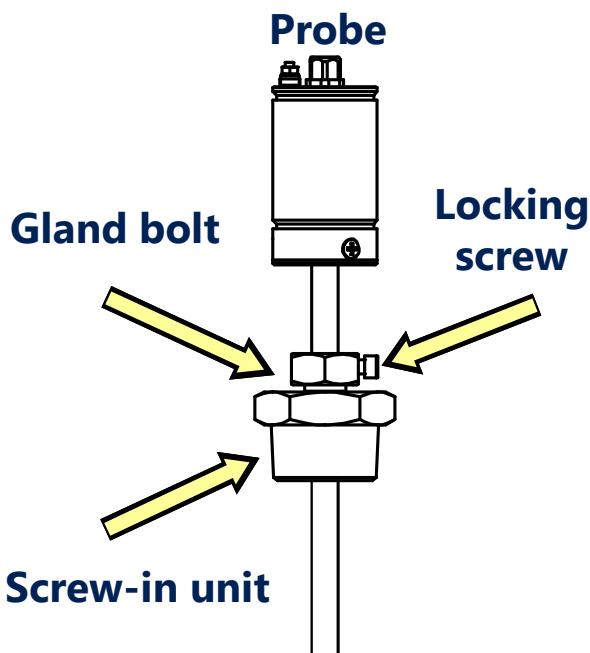

Insert probe until bottom is reached



Screw the screw-in unit into the flange (resp. reducer)

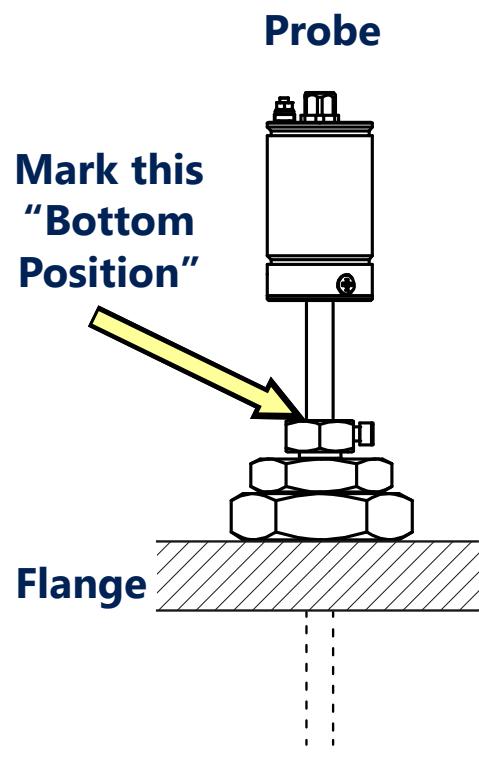





**Mark the “Bottom Position”
and pull out the probe**



**Mark the “Safety Distance”
10 mm below, press the
probe down to this point**

Probe fixing

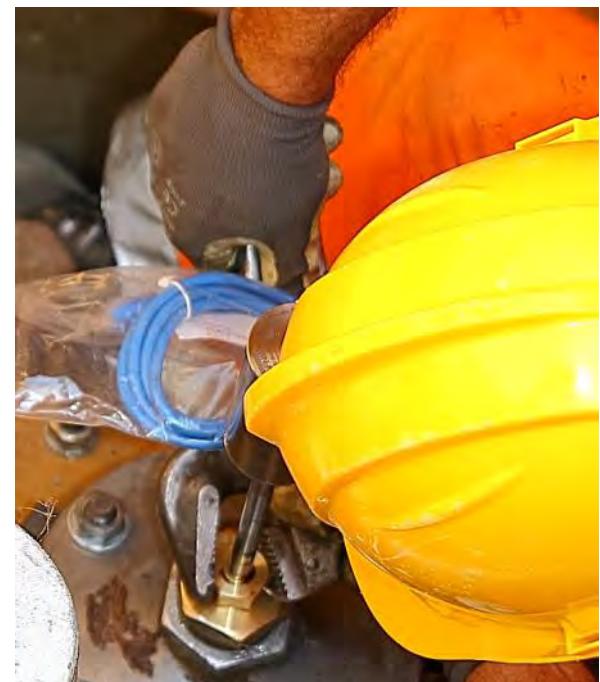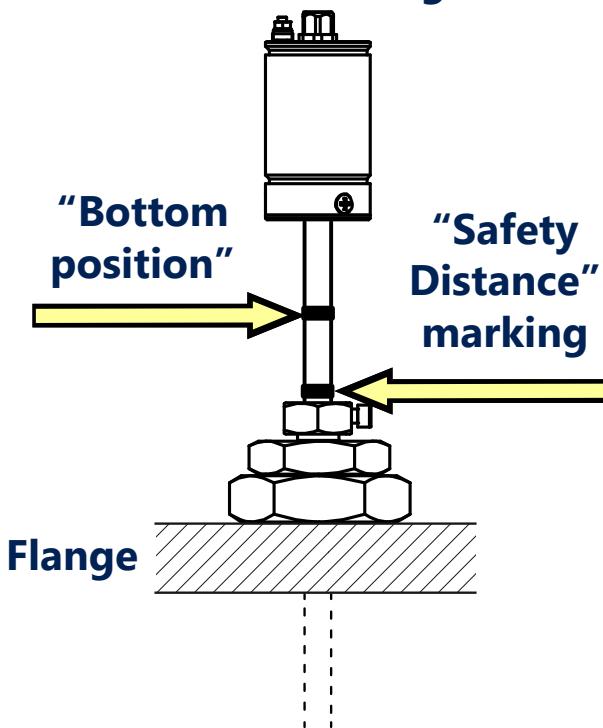


**Tighten the gland bolt
at this “Safety Distance”**




Fix the locking screw
with hexagon socket key



Unscrew yellow cap

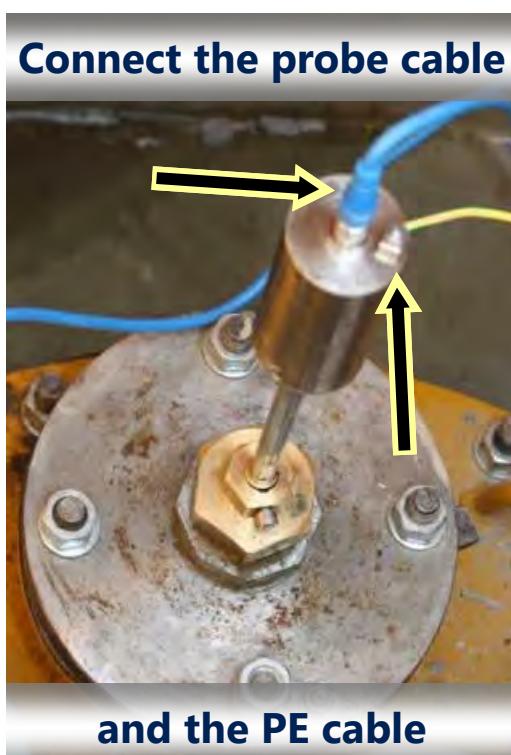



Fix the plug

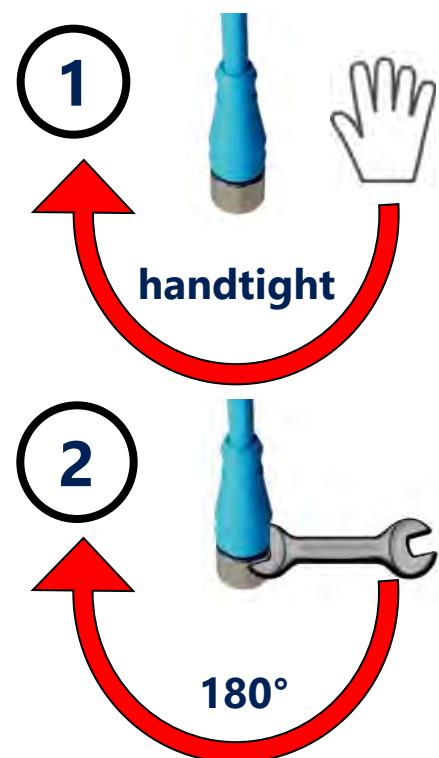

Probe installation complete !



2.2 Sump Control (Sump Manhole)

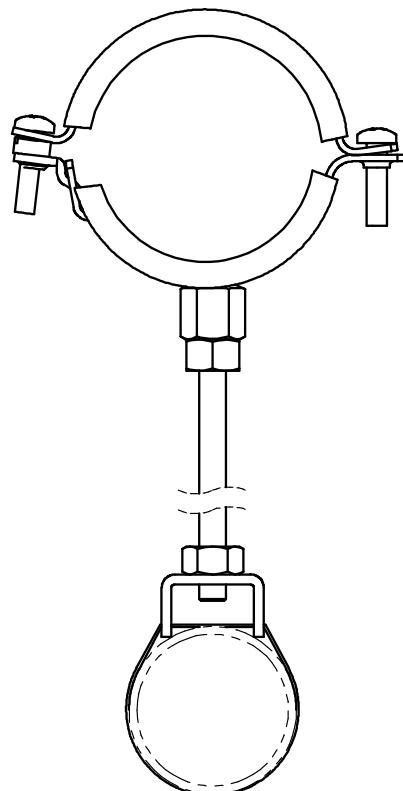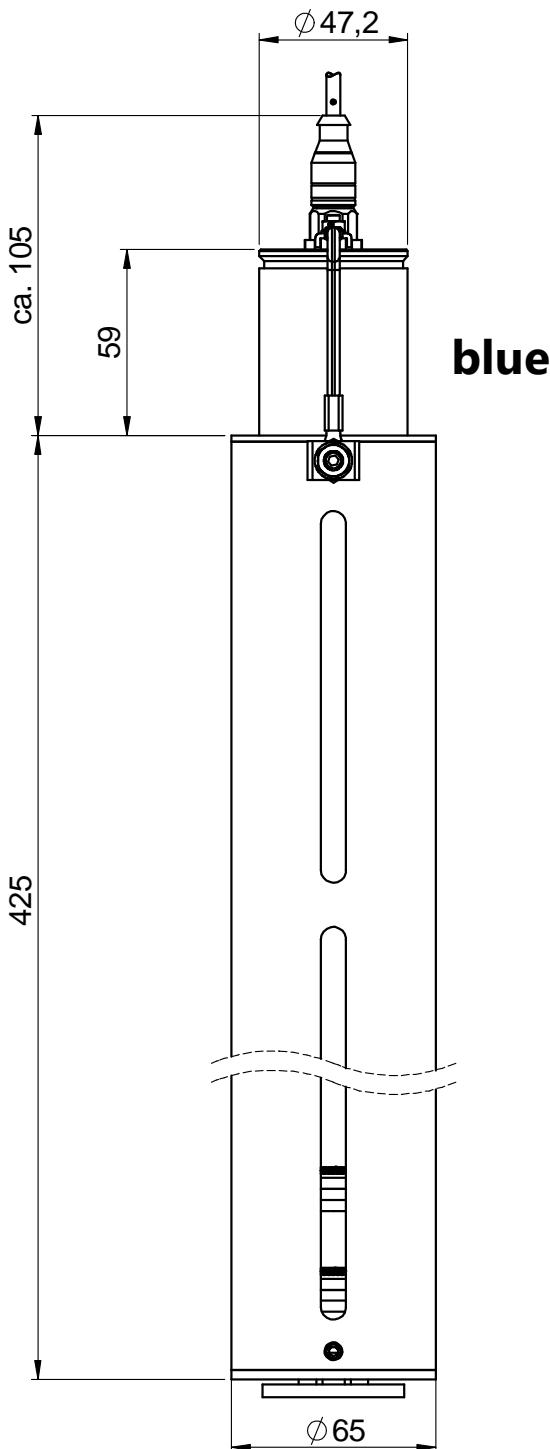

**Sump Installation-Kit
(optional)**

VISY-Stick Sump Manhole






Remove shipping protection



PE cable connector

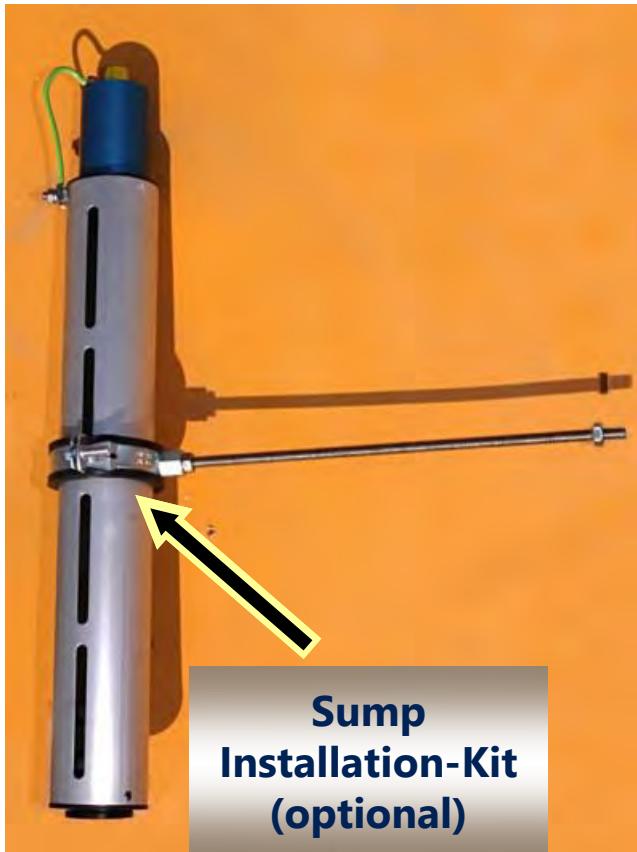


Mounting example



**Mounting example with
washer welding
by installer**





**Unscrew yellow cap
and connect the plug**

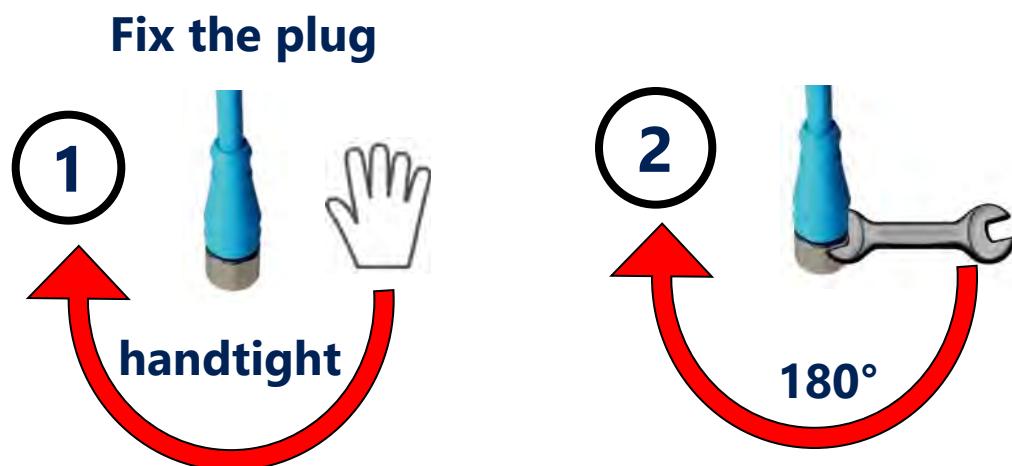


Probe installation complete !


2.3 Probe Wiring (Junction Box)

Up to three different types of VISY-X probes (e.g. VISY-Stick, VISY-Stick Sump, VIMS) can be connected to VISY-Command via one intrinsically safe cable.

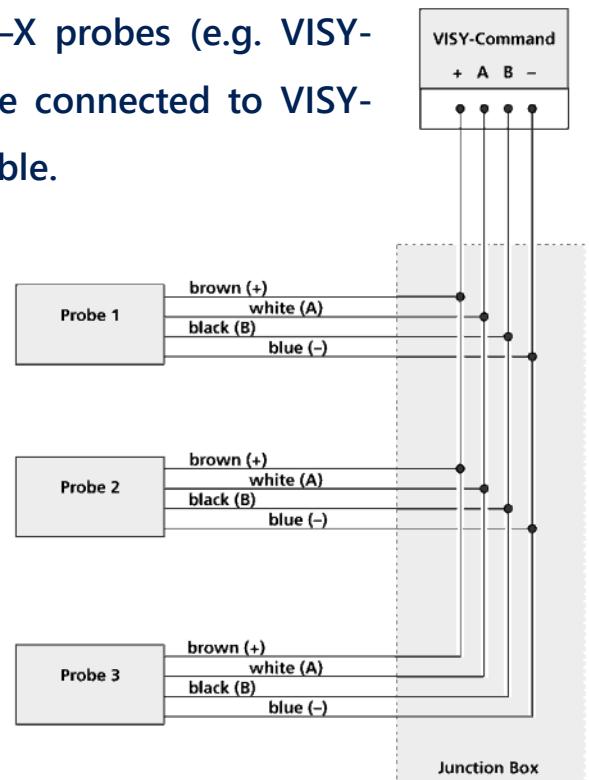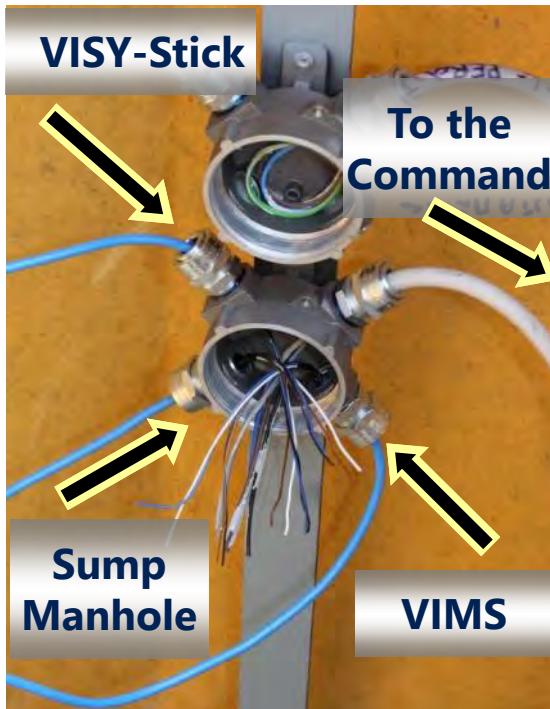

Probe wiring complete !

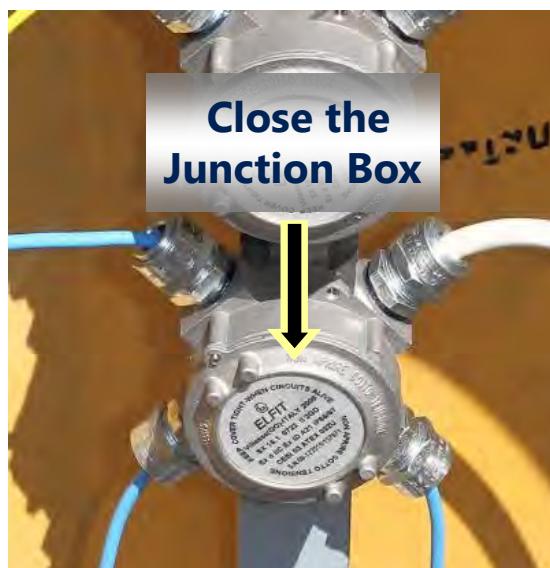


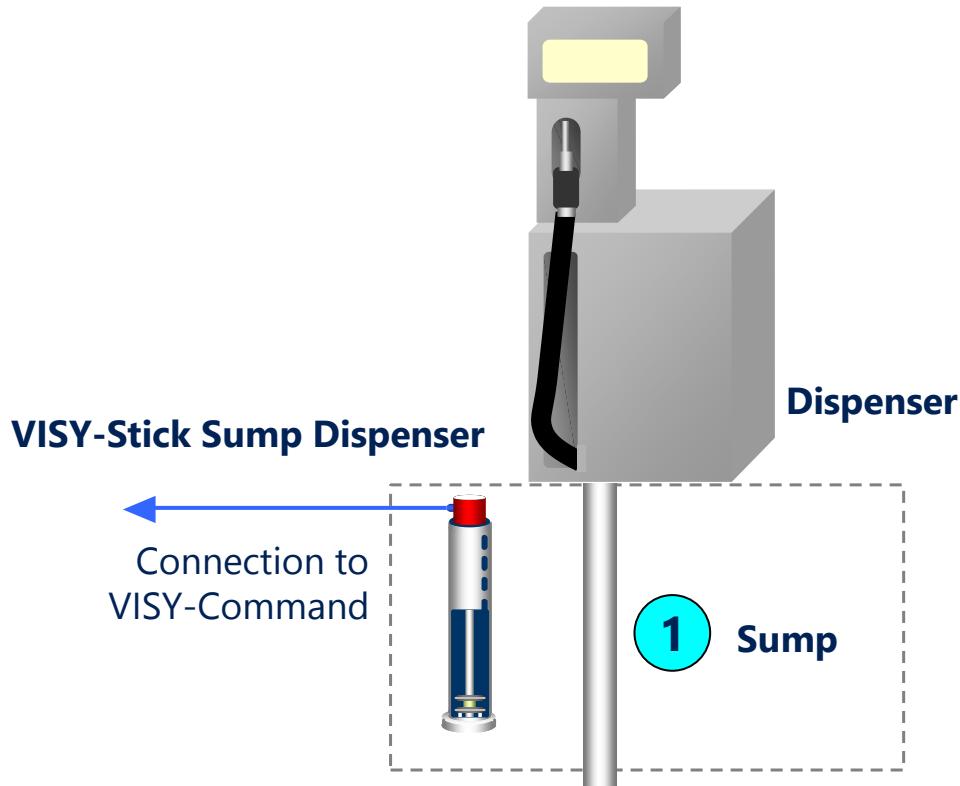


1

**Sump monitoring under the dispenser
with "VISY-Stick Sump Dispenser"**



3.1 Sump Control (Sump Dispenser)

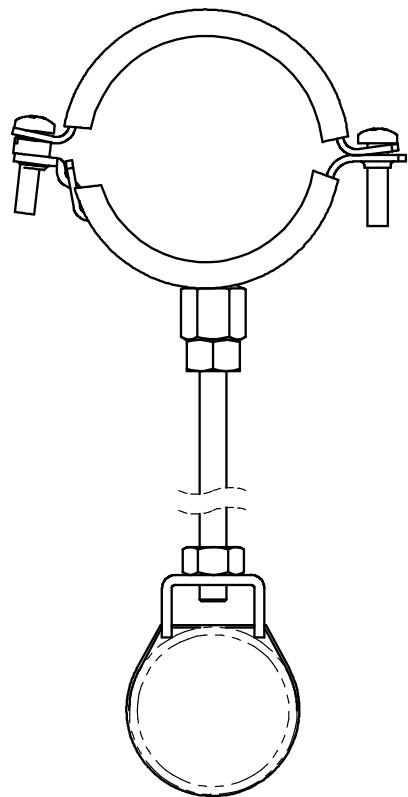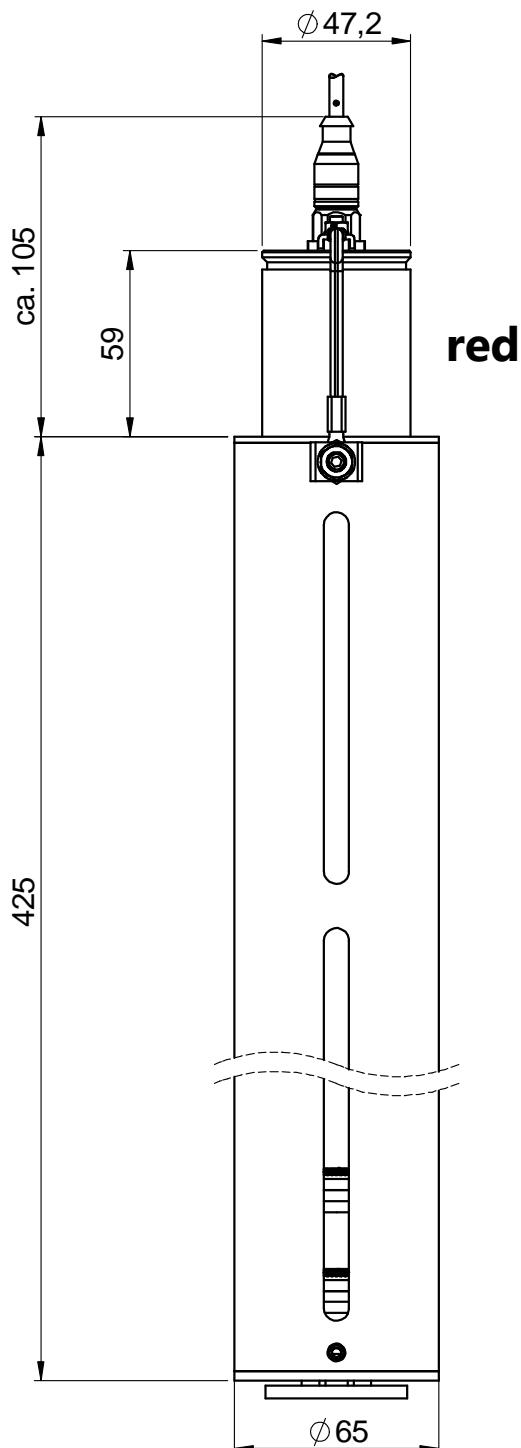

**Sump Installation-Kit
(optional)**

VISY-Stick Sump Dispenser





Pull out the probe




Remove shipping protection



Unscrew yellow cap
and connect the plug


Fix the plug

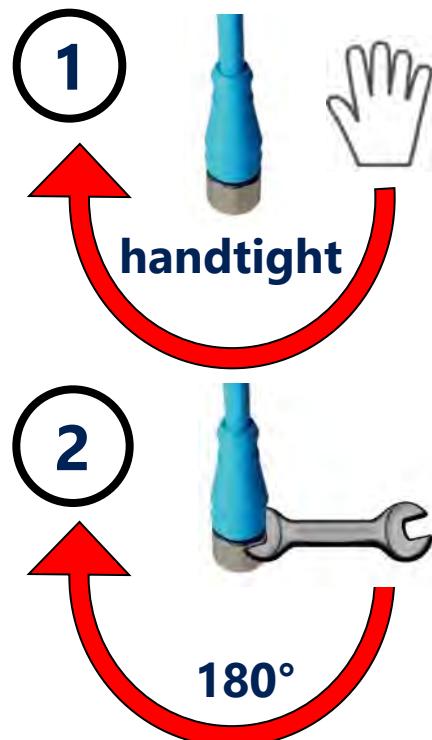

Connect the wires using



FAFNIR Junction Tube

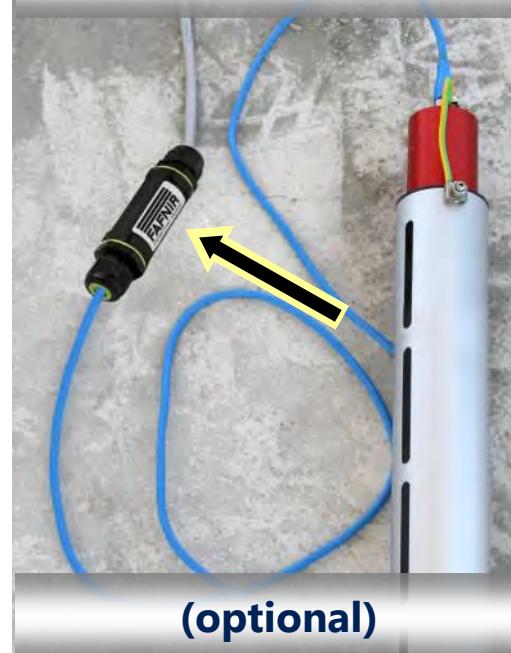


Mounting example



Insert the probe into
an existing open tube

Mounting example

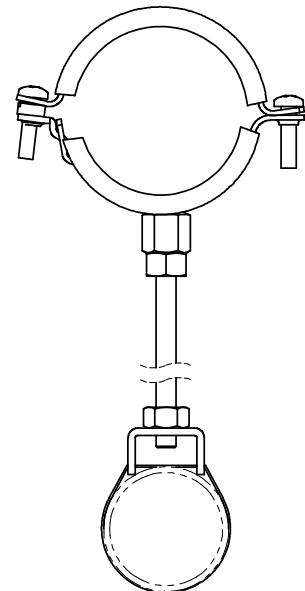

Sump Installation-Kit
(optional)

Probe installation complete !




- 4.1 Leak Detection of Tank Pipes (VIMS Tank)
- 4.2 Leak Detection of Dispenser Pipes (VIMS Dispenser)

For installation instructions of the
Leak Detection system "VIMS"
please see the separate user guide.




5 Controller Units

5.1 Mounting

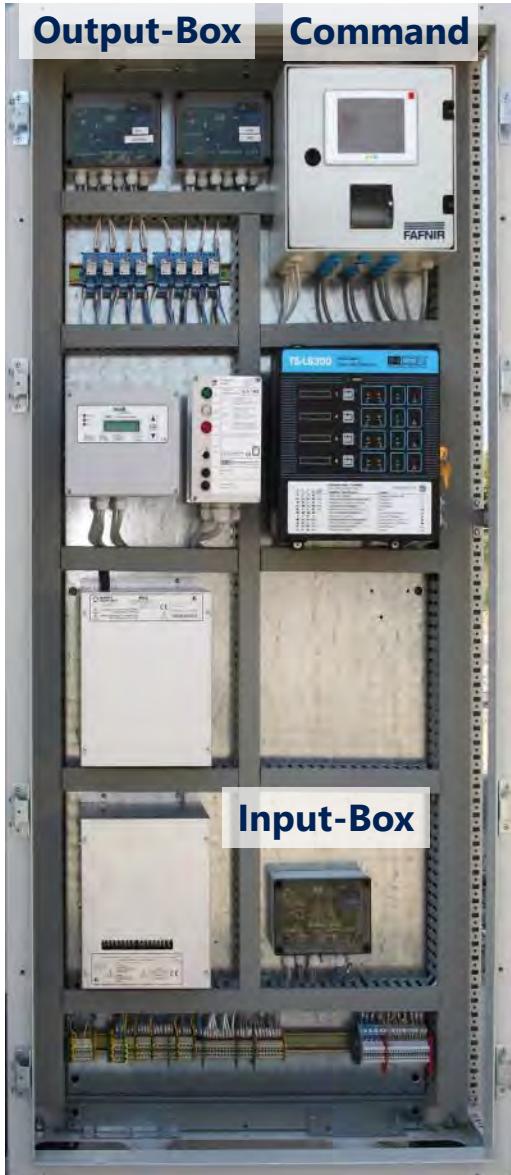


**Electrical
Switchboard
(example)**

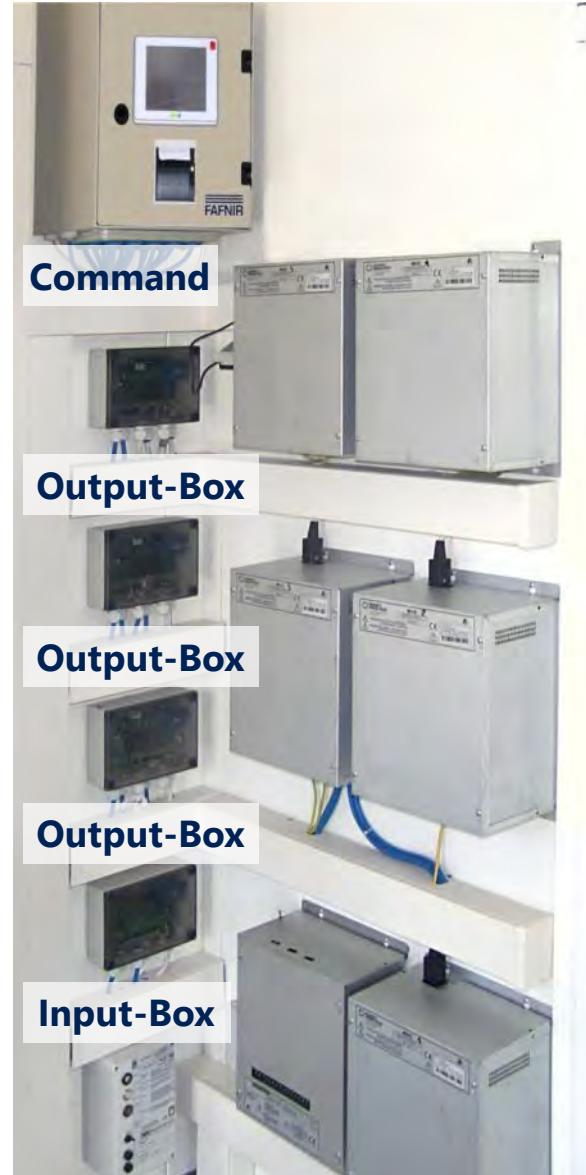

**Wall mounted
(example)**

Wiring Overview

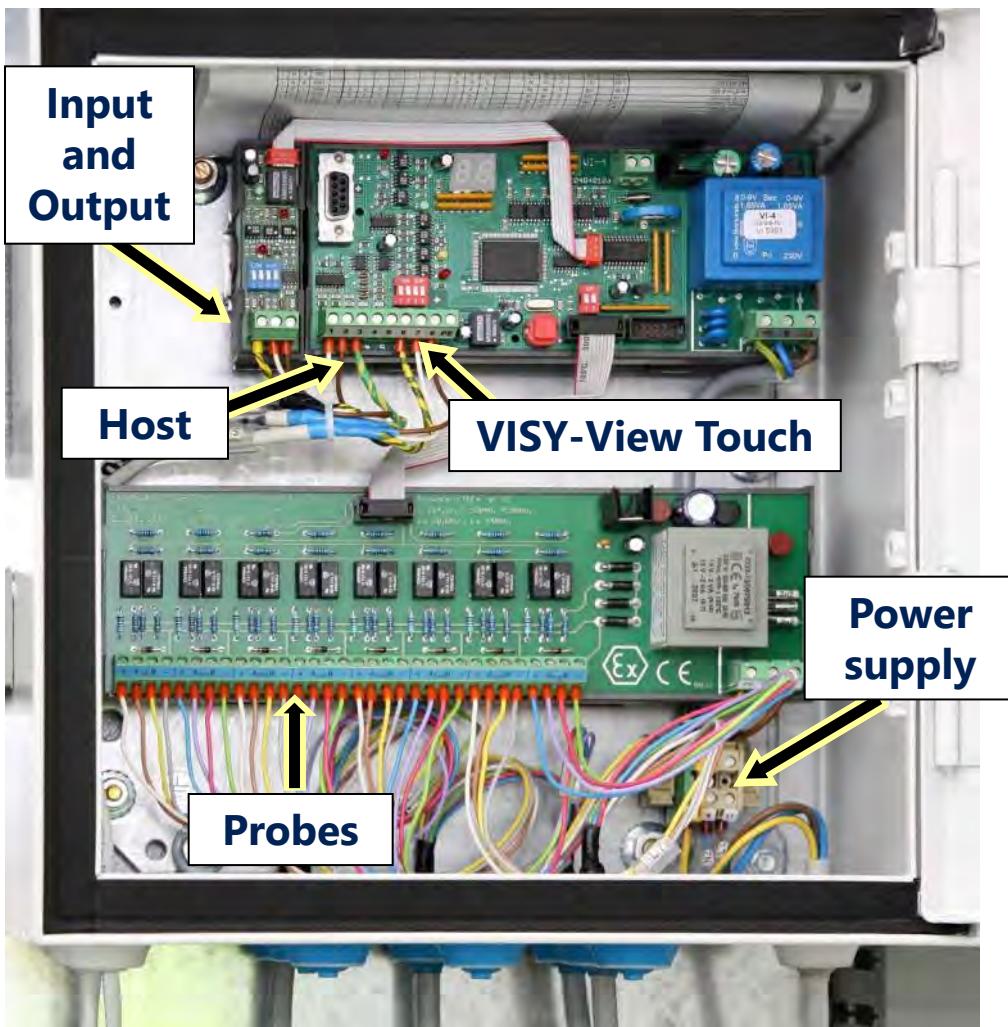


VISY-Command with opened cabinet door



VISY-Command

ICI

Interface VI

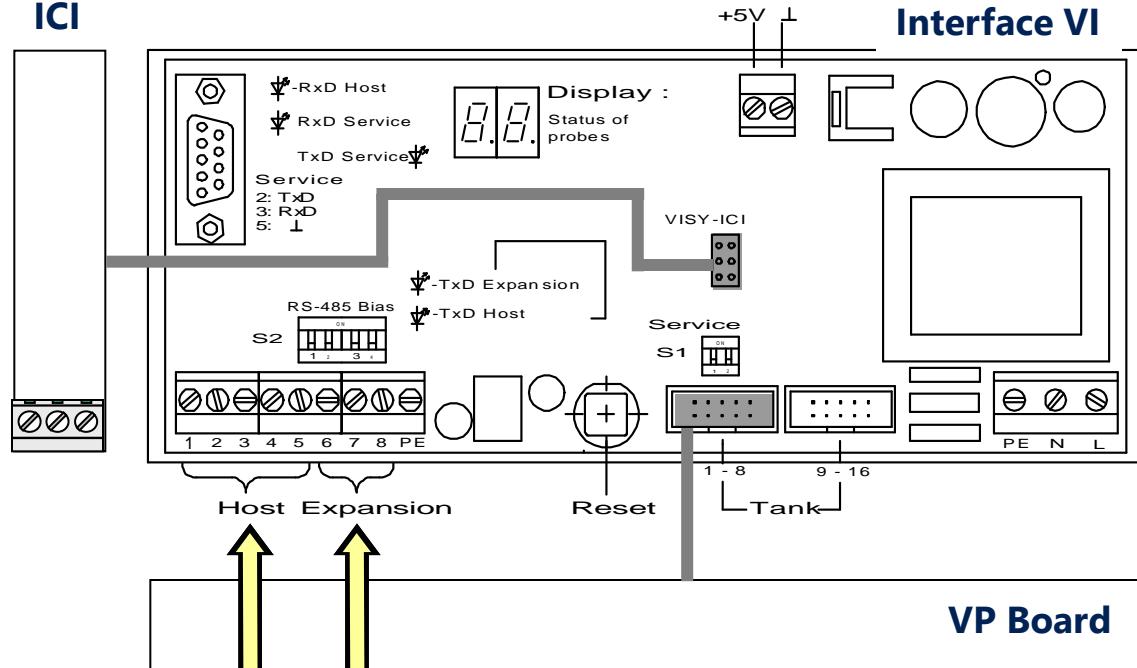


VP Board

Connect Host (PoS) and Expansion (e.g. VISY-View Touch) with the terminal

1	2	3	4	5	6	7	8	9
RxD	TxD	⊥	A+	B-	⊥	A+	B-	PE
RS-232			RS-485			RS-485		
Host					Expansion			

Terminal assignment



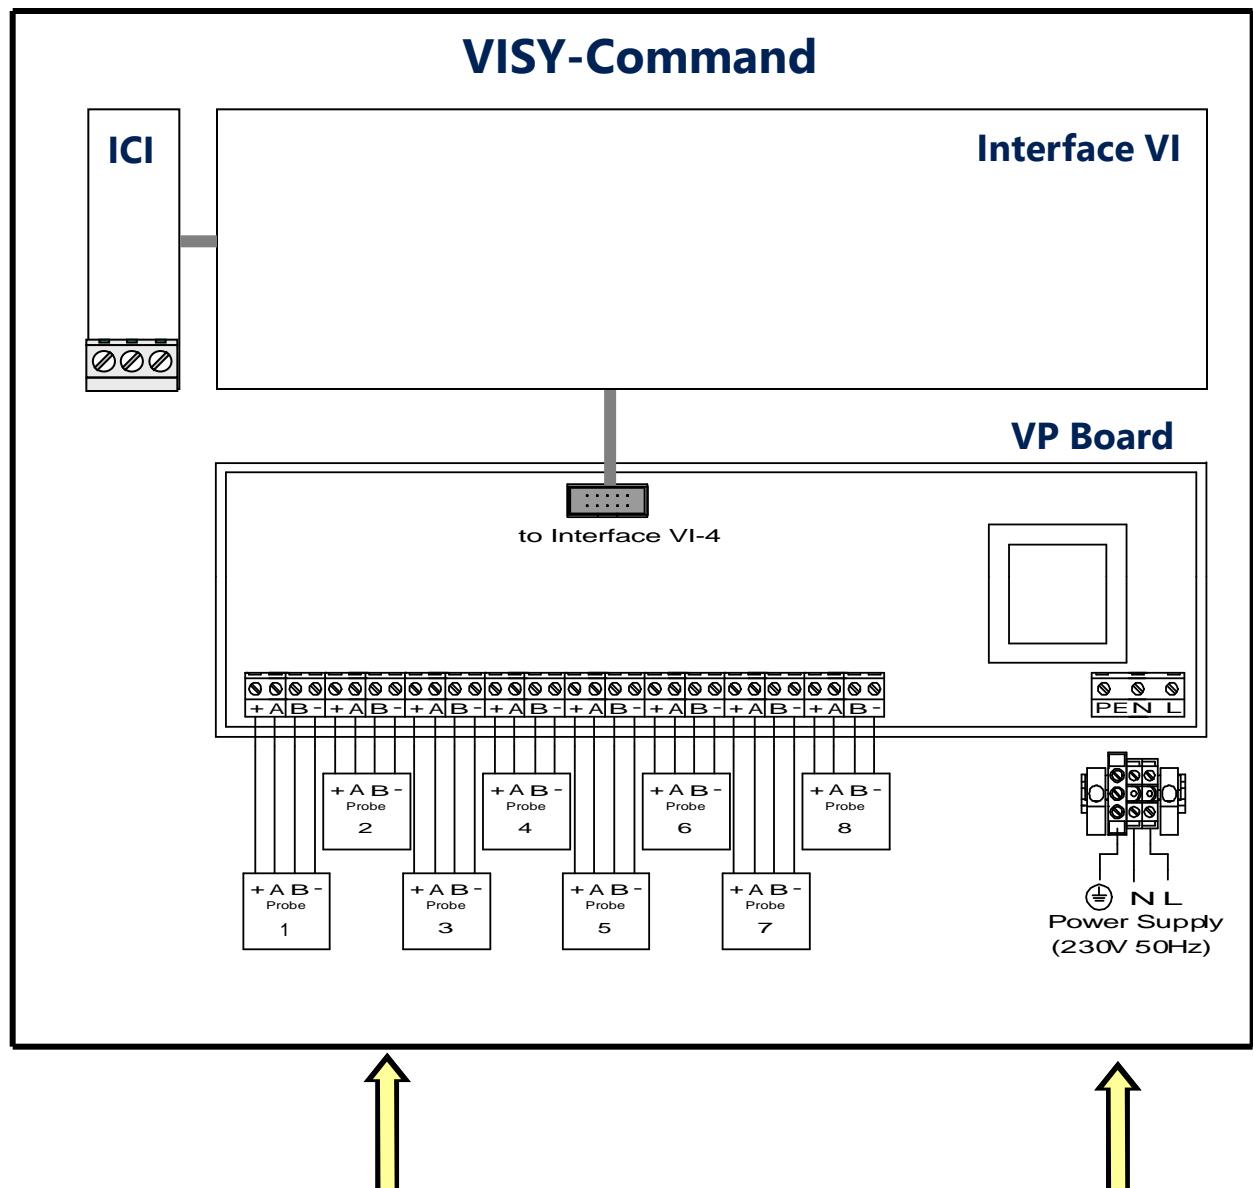

**Connect the probes
to the VP Board
according to the
FAFNIR ATG form**


**Connect
power supply**



VISY-Command




Interface VI

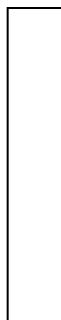


VP Board

**Connect VISY-Input 8 and VISY-Output 8
with the VISY-ICI screw terminal**


VISY-ICI
screw terminal

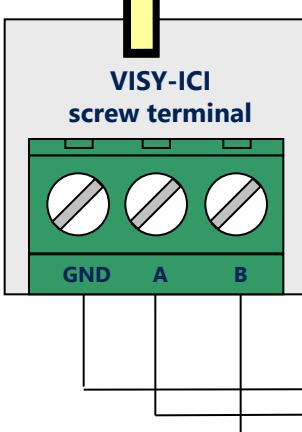

VISY-Input 8 / Output 8

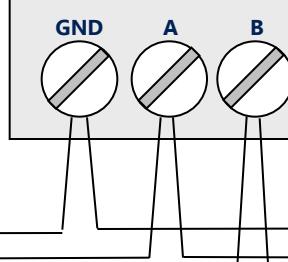



VISY-Input 8 / Output 8

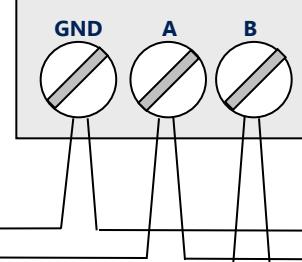


Connection diagram




5.3 VISY-Input Connections

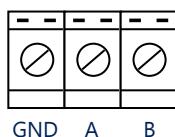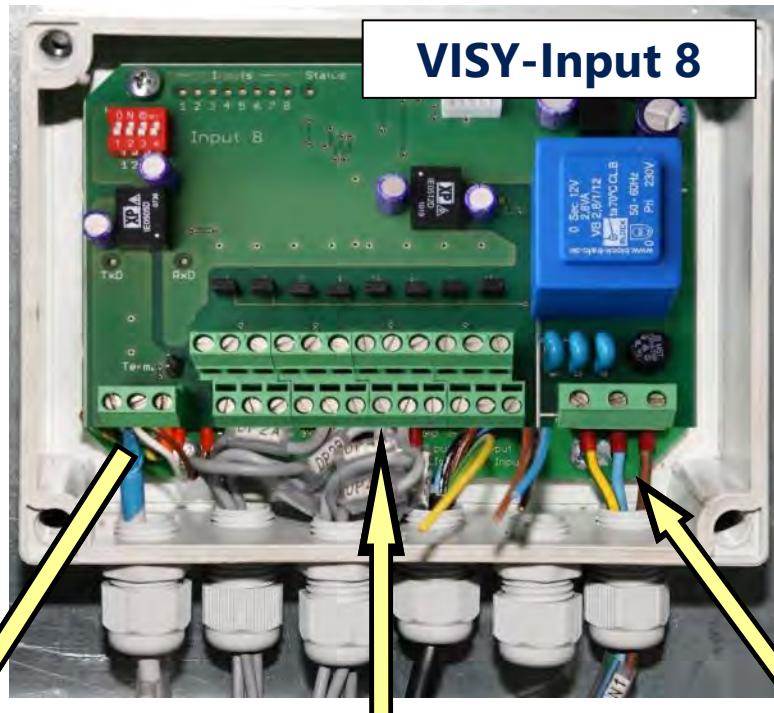

to ICI

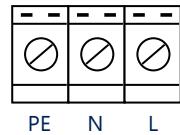


Power supply


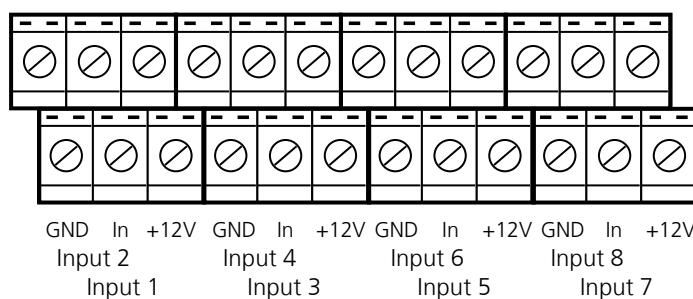


from alarm detectors



5.4 VISY-Output Connections

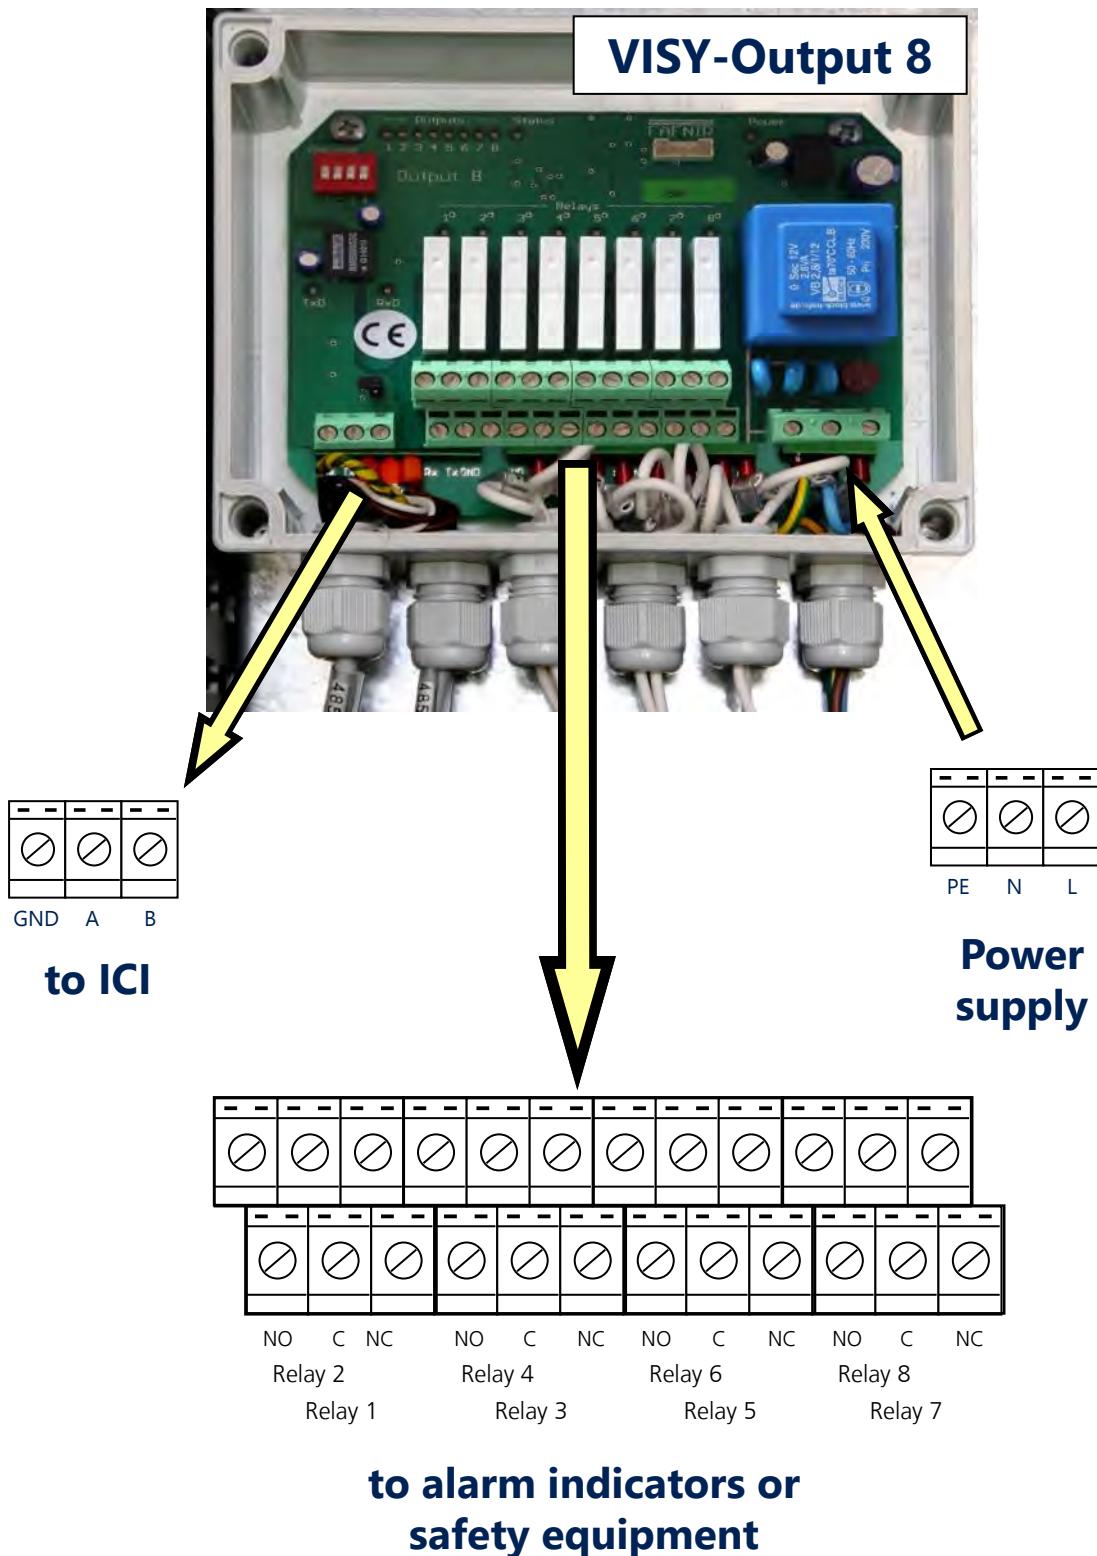

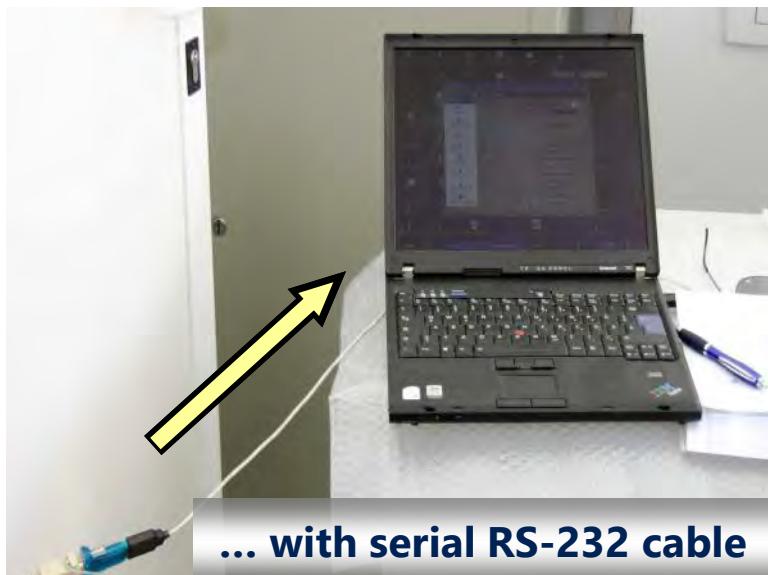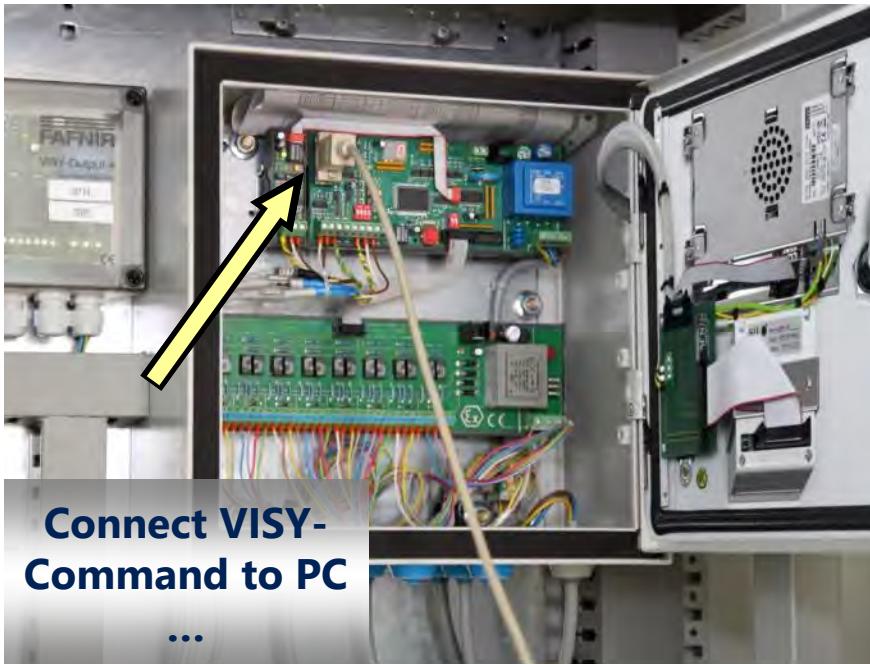

The software VISY-Setup is required for the configuration of VISY-Command. It can be downloaded from the site www.fafnir.com



END



Annex: FAFNIR ATG Details



Station Name

System Type

wired wireless

Tank Components

- VISY-Stick Standard (also for Biodiesel / E10 / Ethanol)
- VISY-Stick Advanced (also for Biodiesel / Ethanol)
- VISY-Stick N for urea solution (AdBlue®)
- VISY-Stick Flex (also for Biodiesel / E10)
- VISY-Stick LPG
- VISY-Density
- VISY-Stick Interstitial Dry / Wet
- VISY-Reed Interstitial Dry / Wet
- VISY-Stick Sump Manhole
- VISY-Reed Sump Manhole

Dispenser Components

- VISY-Stick Sump Dispenser
- VISY-Reed Sump Dispenser

Date of Installation

Date of Commissioning

Warranty Start

Warranty End

Date

Signature (Installer)

Date

Signature (Station Manager / Project Manager)




FAFNIR ATG Details


Terminal No. (VP-Board)	Tank No. / Dispenser No.	Tank Volume [l]	Tank Diameter [mm]	Type of Product	Offset (see Diagram)	VISY-Stick Ser. No.	VISY-Stick Sump Manhole Ser. No.	VISY-Stick Density Ser. No.	VISY-Stick Interstitial Ser. No.	VISY-Reed Interstitial Ser. No.	VISY-Reed Sump Manhole Ser. No.	VISY-Reed Sump Dispenser Ser. No.
1												
2												
3												
4												
5												
6												
7												
8												
9												
10												
11												
12												
13												
14												
15												
16												



FAFNIR VISY-X system architecture including environmental sensors

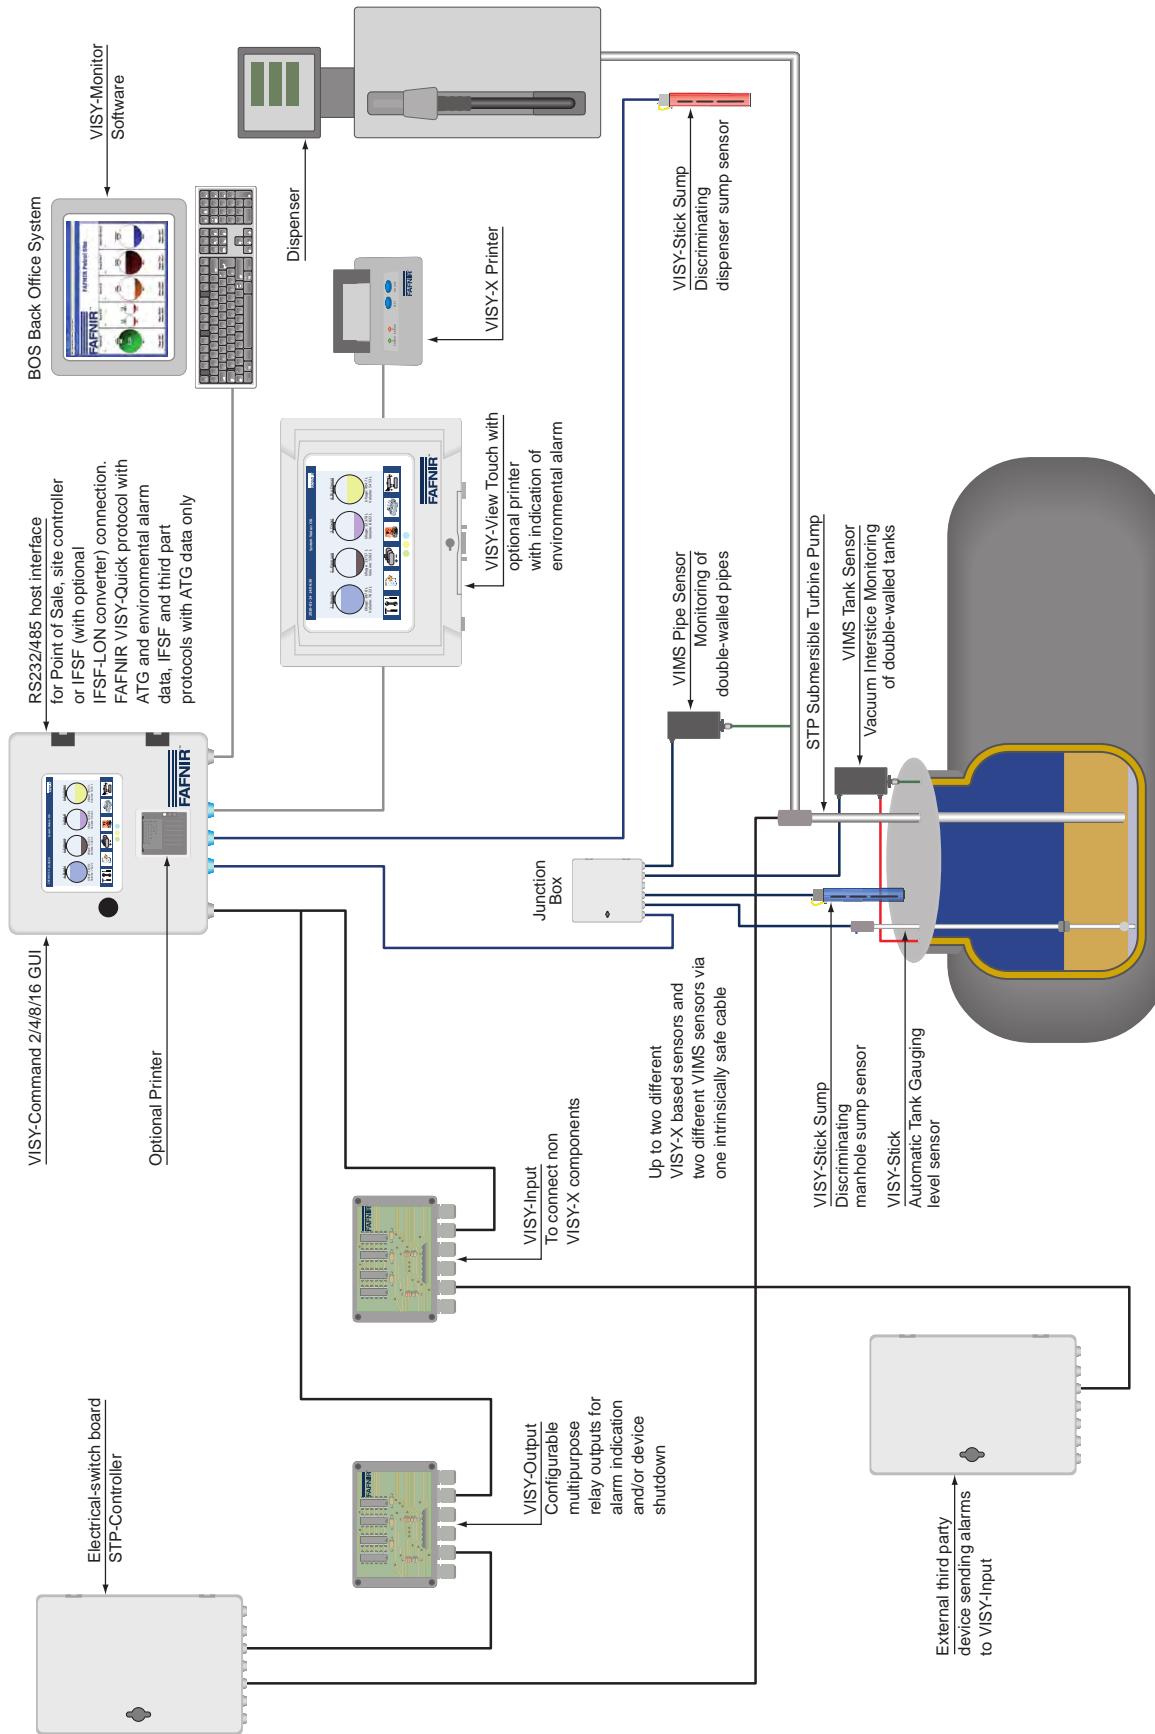

FAFNIR VISY-X system architecture including environmental sensors

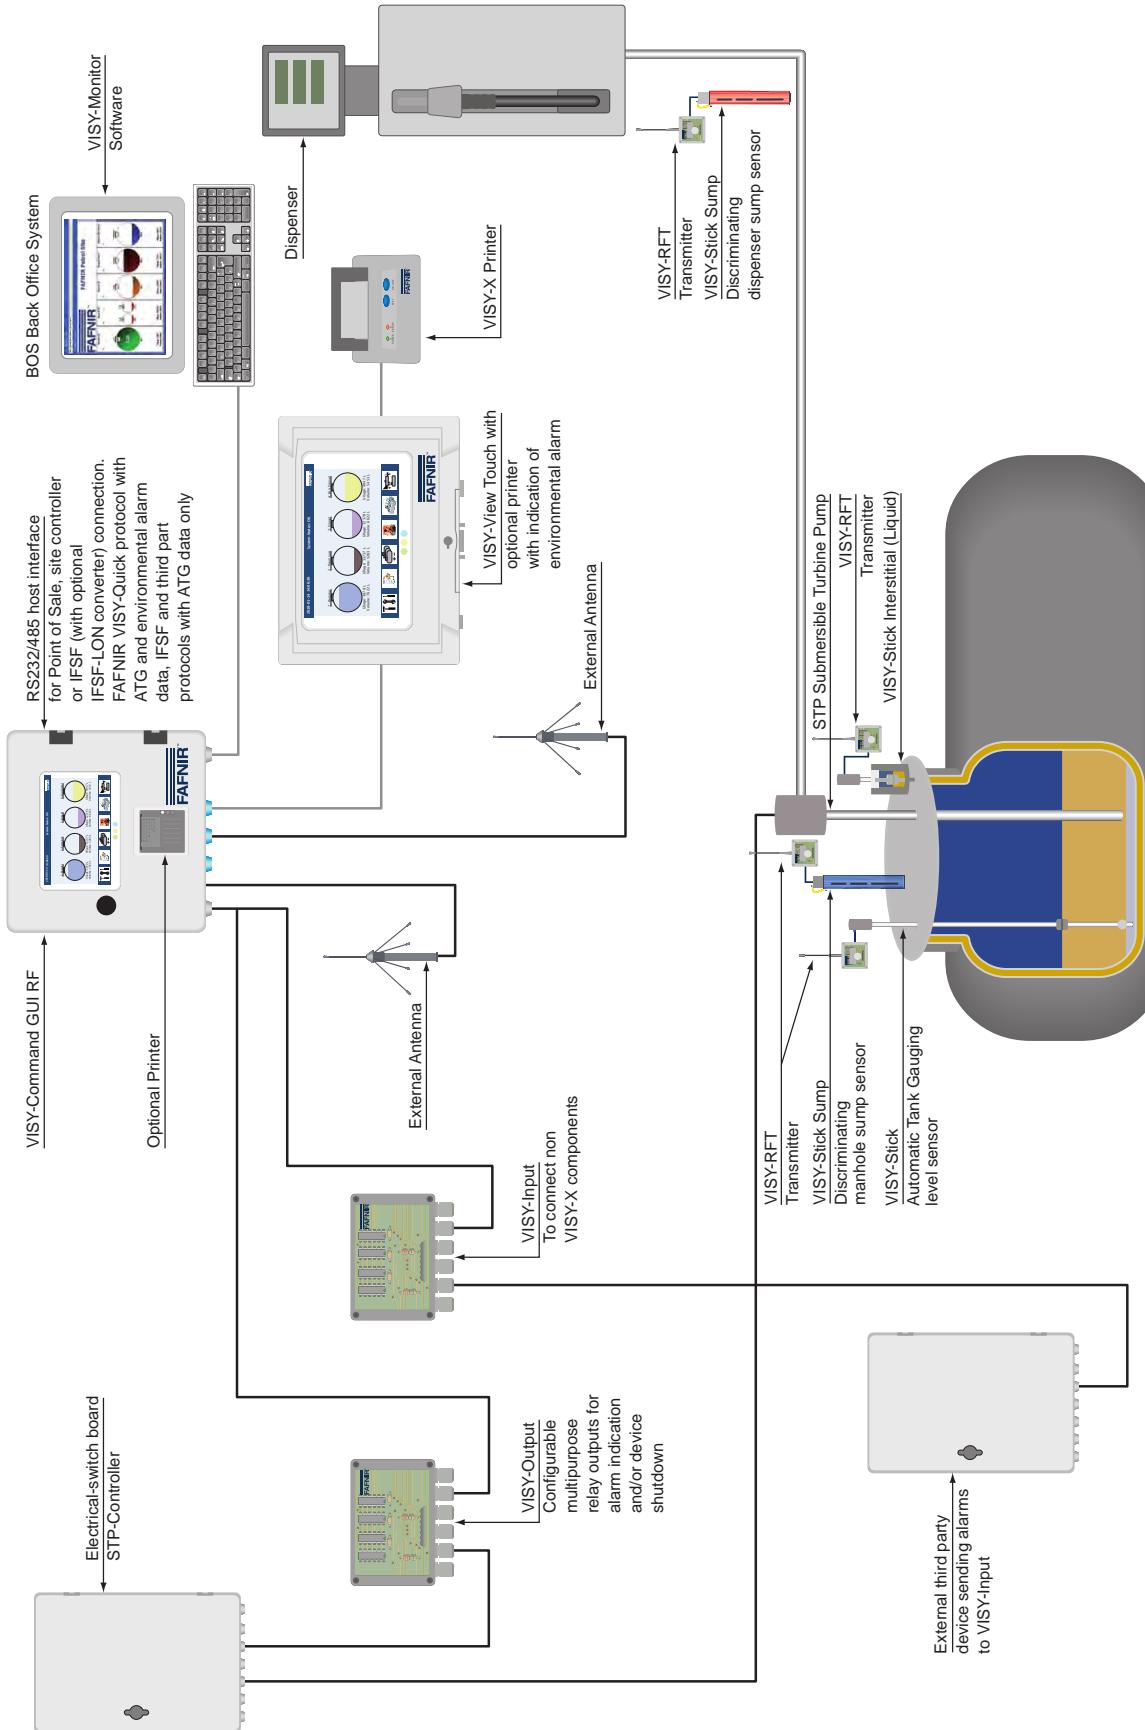

FAFNIR GmbH
Bahrenfelder Straße 19
22765 Hamburg
Germany
Phone: +49/40/39 82 07–0
Fax: +49/40/39 06 33 9
E-mail: info@fafnir.de
Internet: www.fafnir.com

Managing directors:
René Albrecht, Claudia Ploog, Patrick Forsythe
Registered Office and Commercial Register Hamburg HRB 11010,
VAT-ID No.: DE 811 235 507

Article no.: 350016

© Copyright

Reproduction and translation only with the written consent of the FAFNIR GmbH.
The FAFNIR GmbH reserves the right to carry out product alterations without prior notice.

