Technical Documentation



VISY-X

VISY-Command GUI Retrofit Display



Version: 1

Edition: 2022-09 Art. no.: 350381



Table of Contents

1	Overview	1
2	Scope of Delivery	2
3	Installation	3
3.1	VISY-Command GUI with Front Plate	3
3.2	Front Plate Dismantling	4
3.3	GUI Display Mounting	5

I Contents



1 Overview

VISY-Command GUI is the evaluation unit available with an integrated display that shows locally the current tank data, delivery data and various alarms that are recorded by the VISY-X system.

This manual describes how to retrofit the **GUI display** to a VISY-Command GUI with front plate using the conversion kit.

The conversion kit can be ordered at FAFNIR with article number 902000.

Overview Page 1/6



2 Scope of Delivery



GUI Display

 Display for VISY-Command GUI fixed in a plastic frame

Cable ties

Page 2/6 Scope of Delivery



3 Installation



Disconnect the VISY-Command GUI from power supply before opening the housing and protect it against reconnection, as well as determine the absence of voltage on all poles.

3.1 VISY-Command GUI with Front Plate




(1) Unlock the VISY-Command GUI with the housing key and open the housing door.

Installation Page 3/6




3.2 Front Plate Dismantling

(1) Unplug the earthing cable connected to the nut of the front plate's backside.

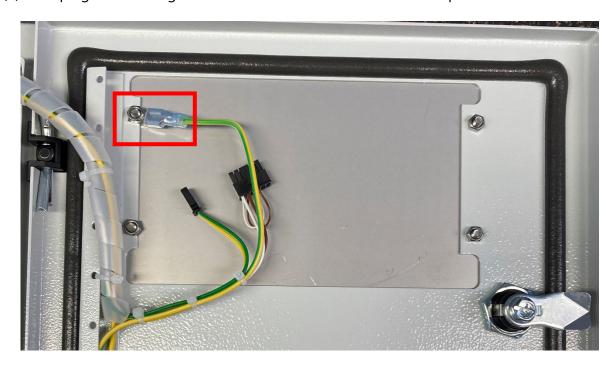

(2) Remove the 4 nuts from the backside of the plate and remove the plate completely from the VISY-Command GUI.

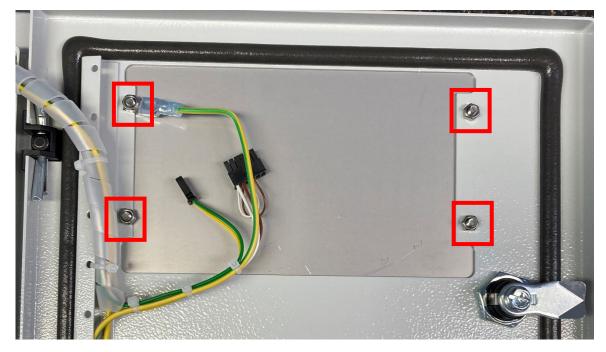

Page 4/6 Installation




3.3 GUI Display Mounting

(1) Unscrew the 2 metal plates connected to the side of the display and keep it aside.




(2) Carefully insert the new display into the VISY-Command GUI door and align it properly with the door. Now place the 2 metal rods plates on either side of the display and screw them onto the door so that the display is fixed to the door.

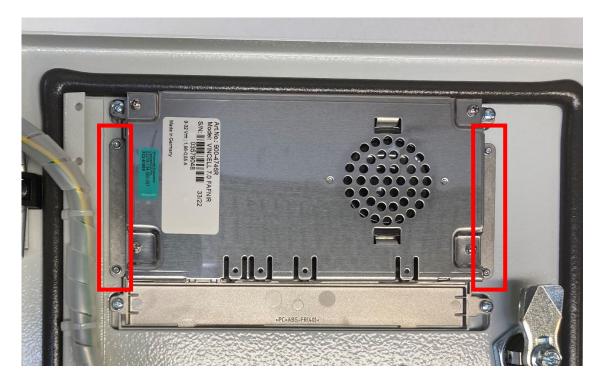


Installation Page 5/6



(3) Connect the cables to the display as shown below

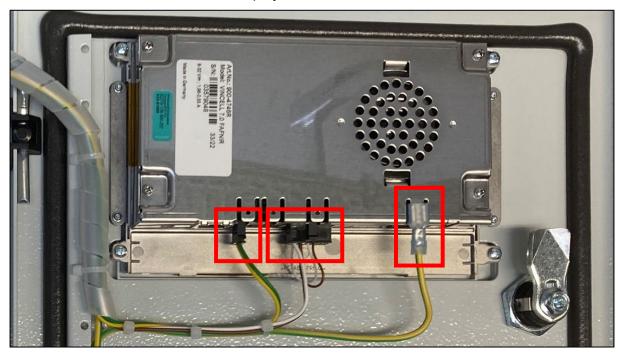

(4) Final result

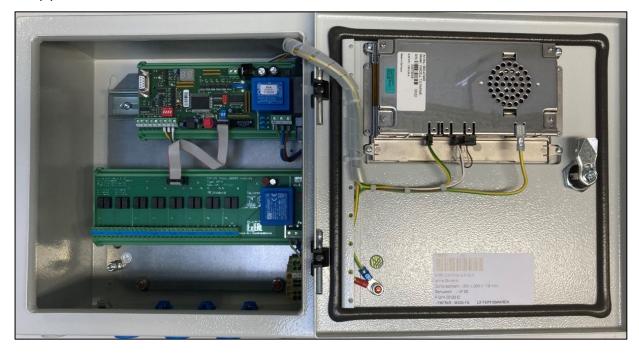

All cables must be secured so that they cannot lie on or fall onto the VP board.

- (5) Close the housing door of the VISY-Command GUI and lock it with the housing key.
- (6) Mounting of the GUI display to the VISY-Command GUI is now completed

Page 6/6 Installation



Blanl	k Pag	e
-------	-------	---



Blank Page



Blank Page



FAFNIR GmbH Schnackenburgallee 149 c 22525 Hamburg, Germany T: +49/40/39 82 07-0

E-mail: info@fafnir.com Web: www.fafnir.com